


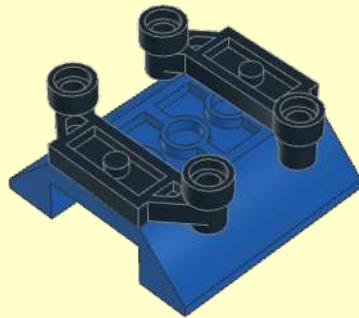


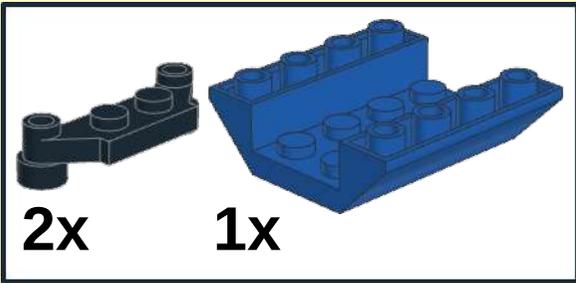


1

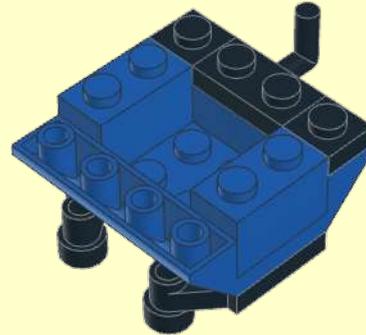


2

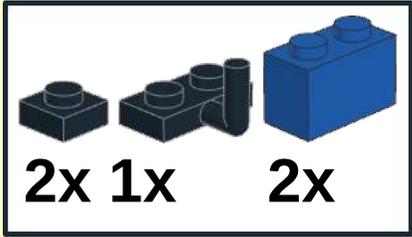

3

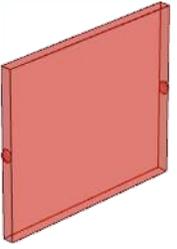


1x

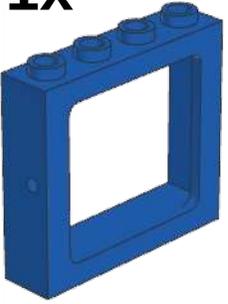


1x




1x

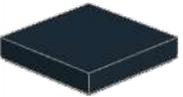



1x

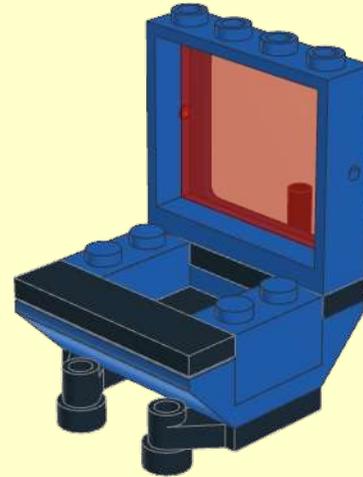


4

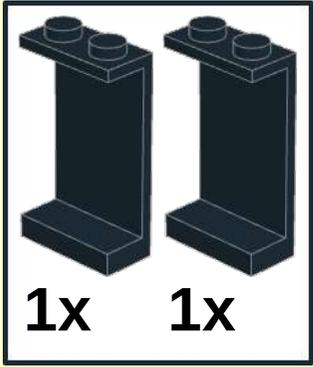



5

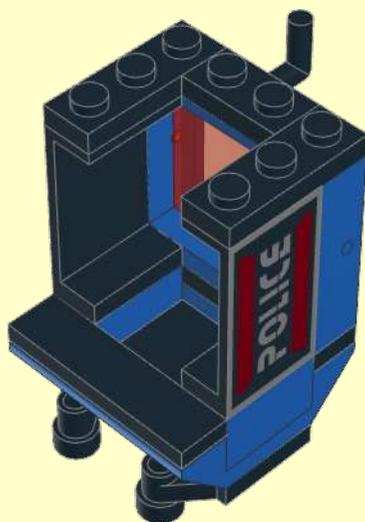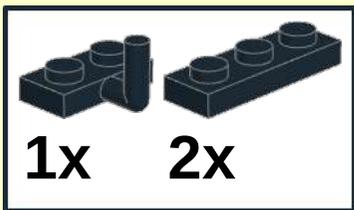



6

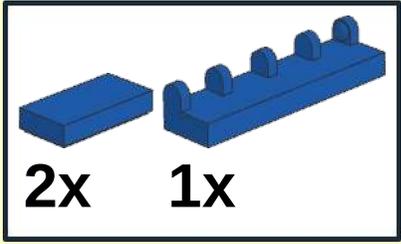




7

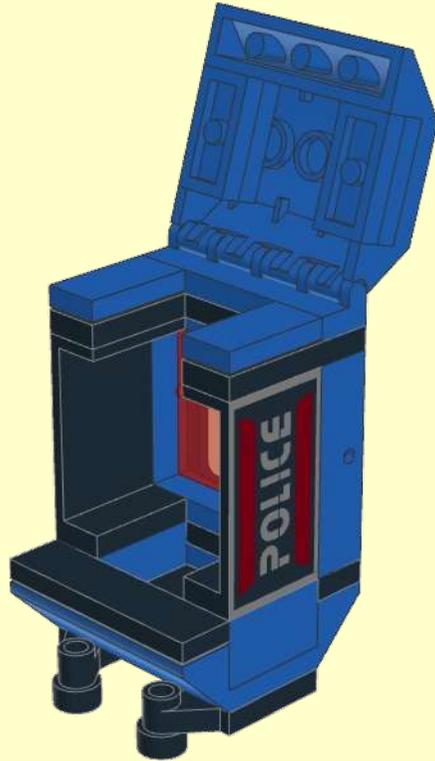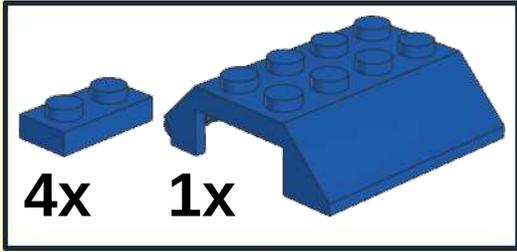



8

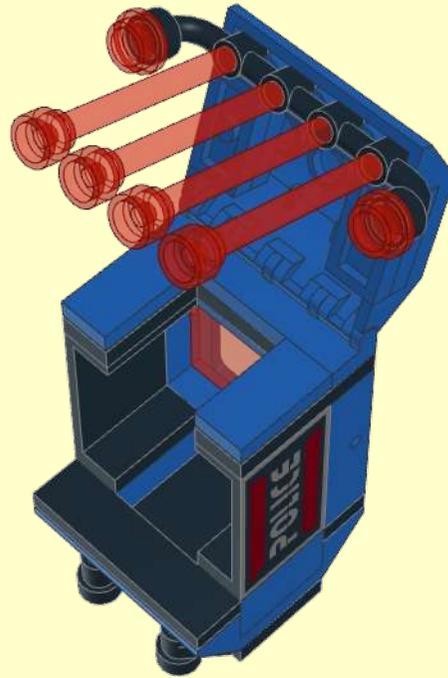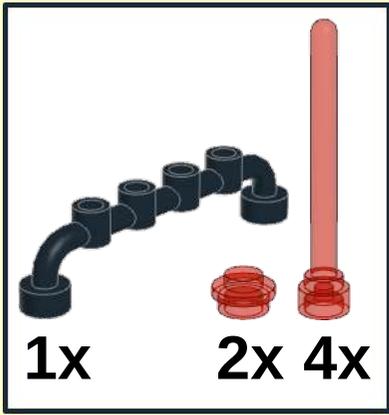



1

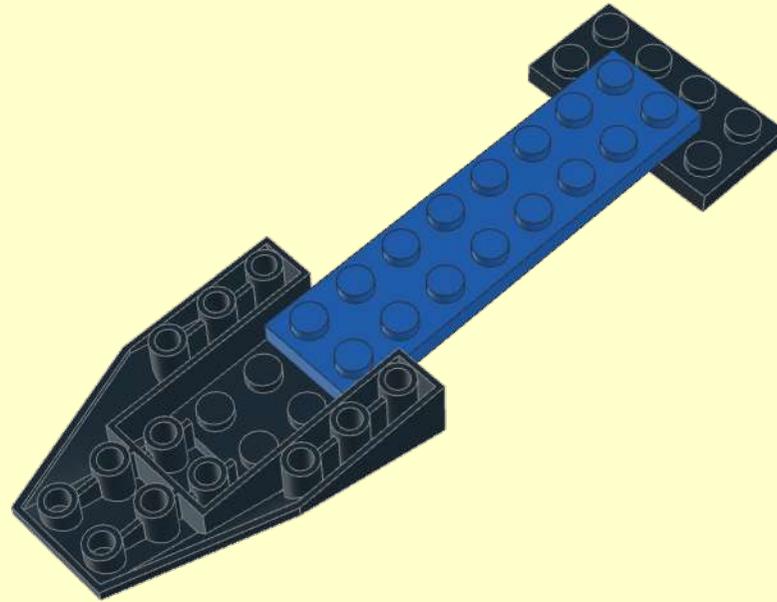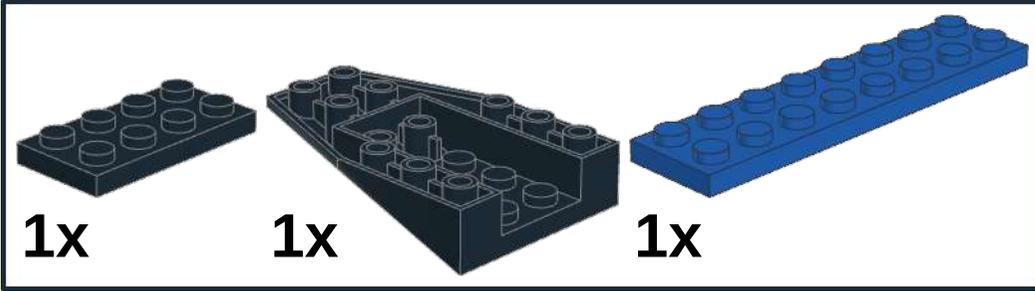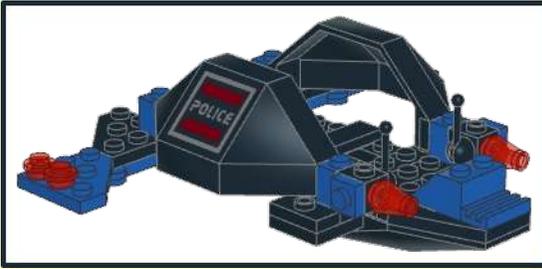



2

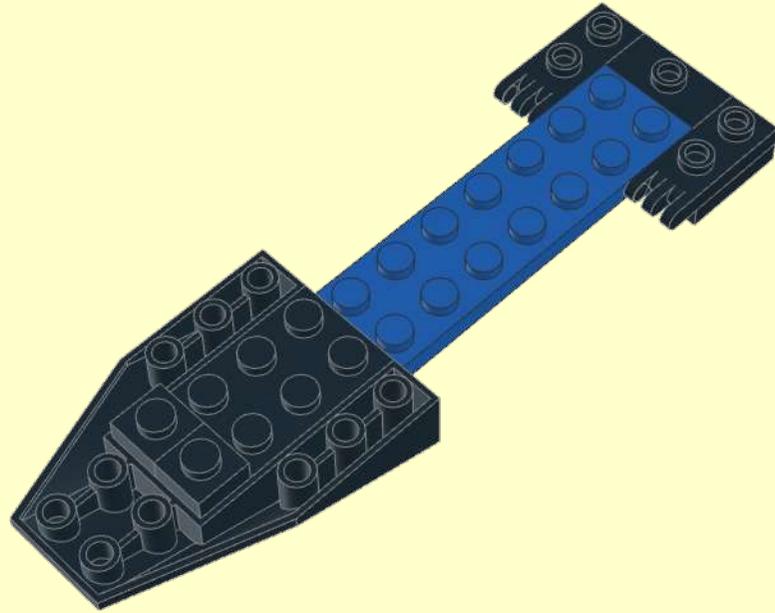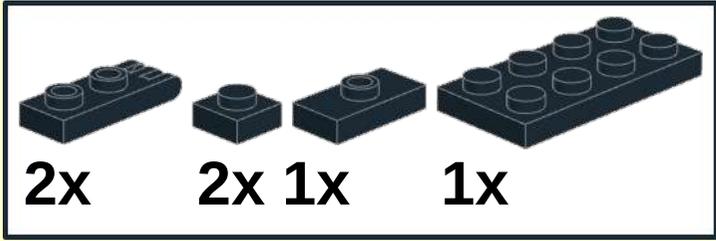



3

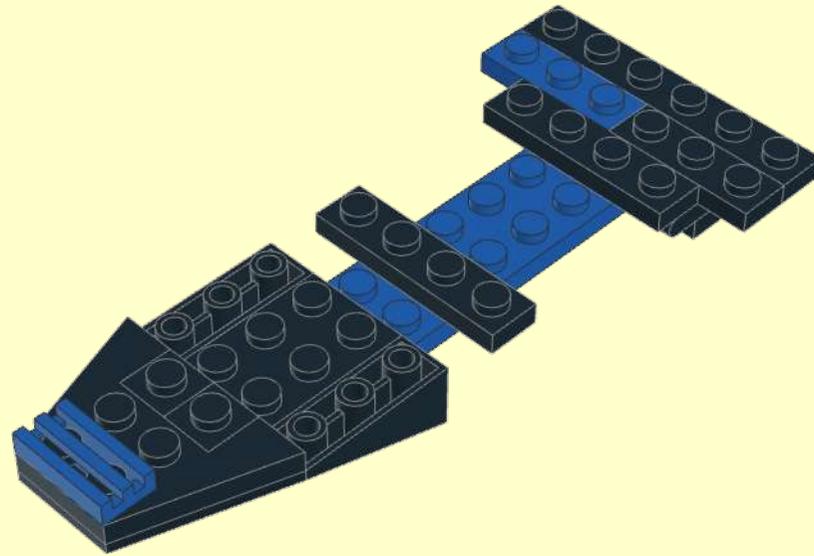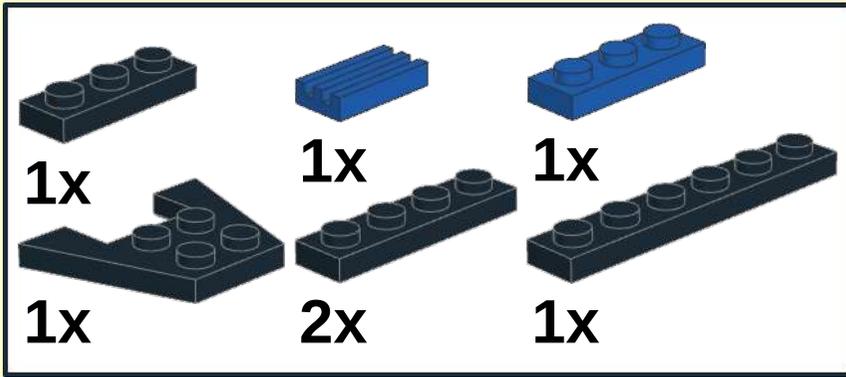

4

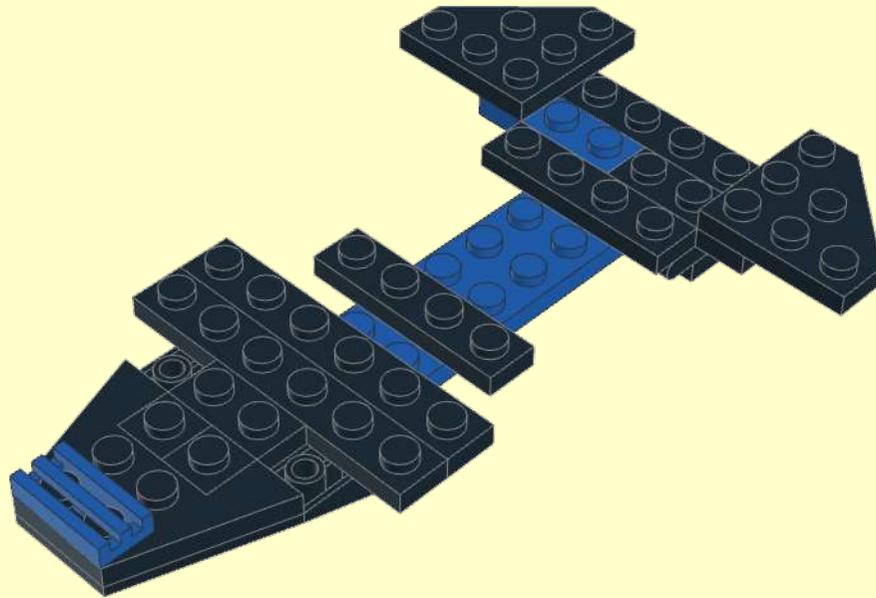
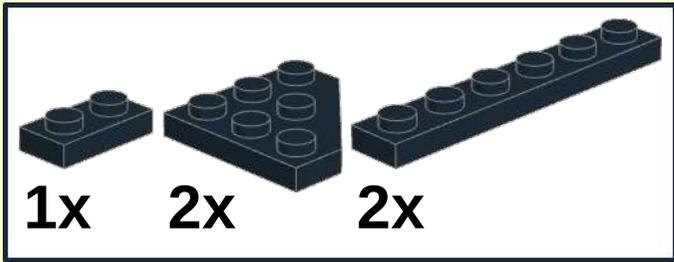


5

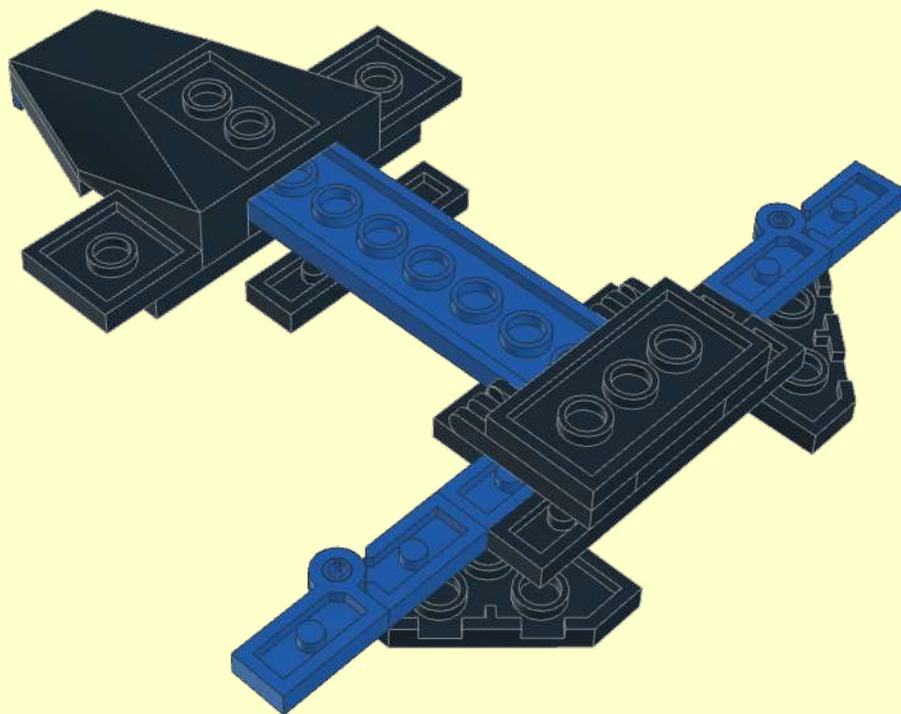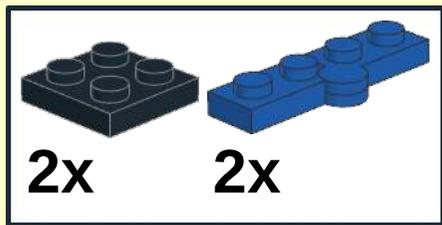





7

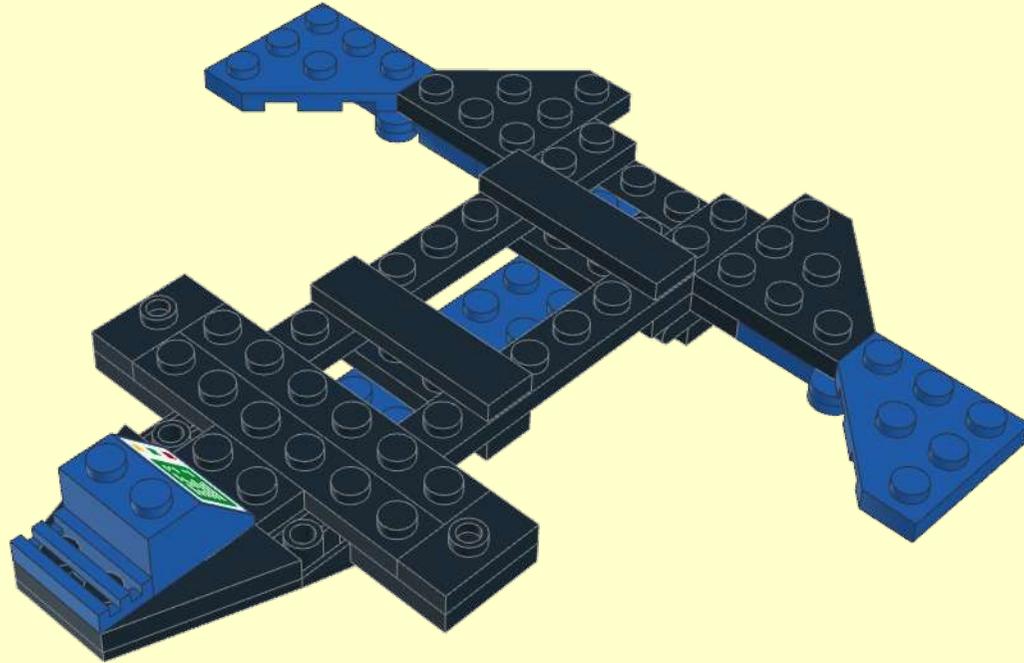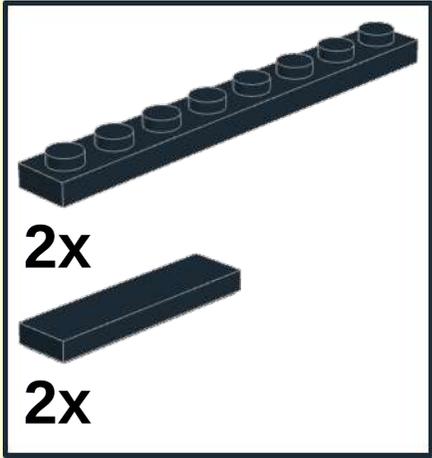

8  
4x

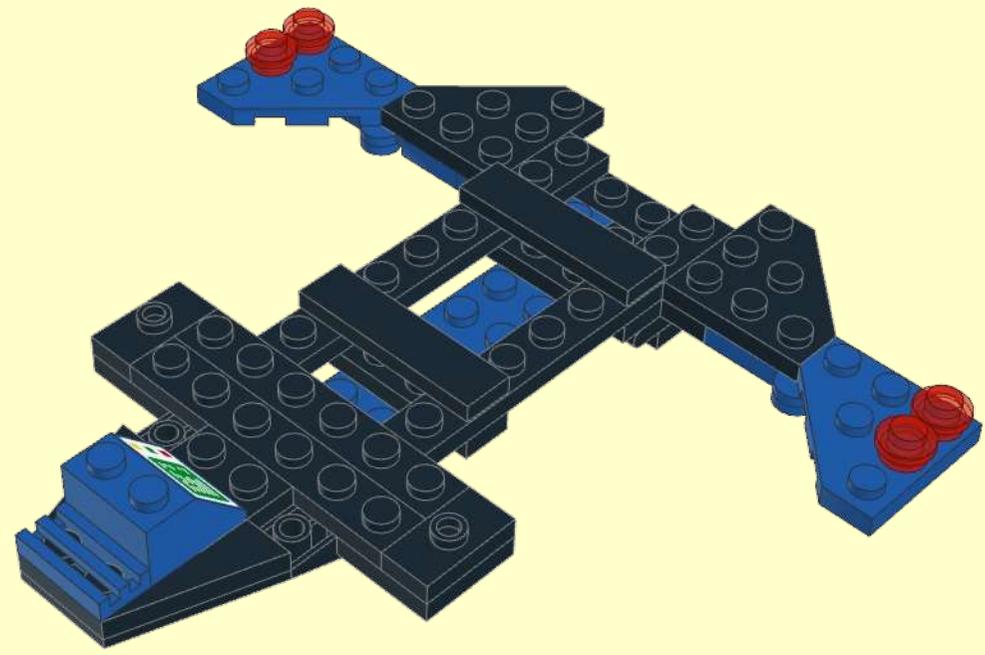

9

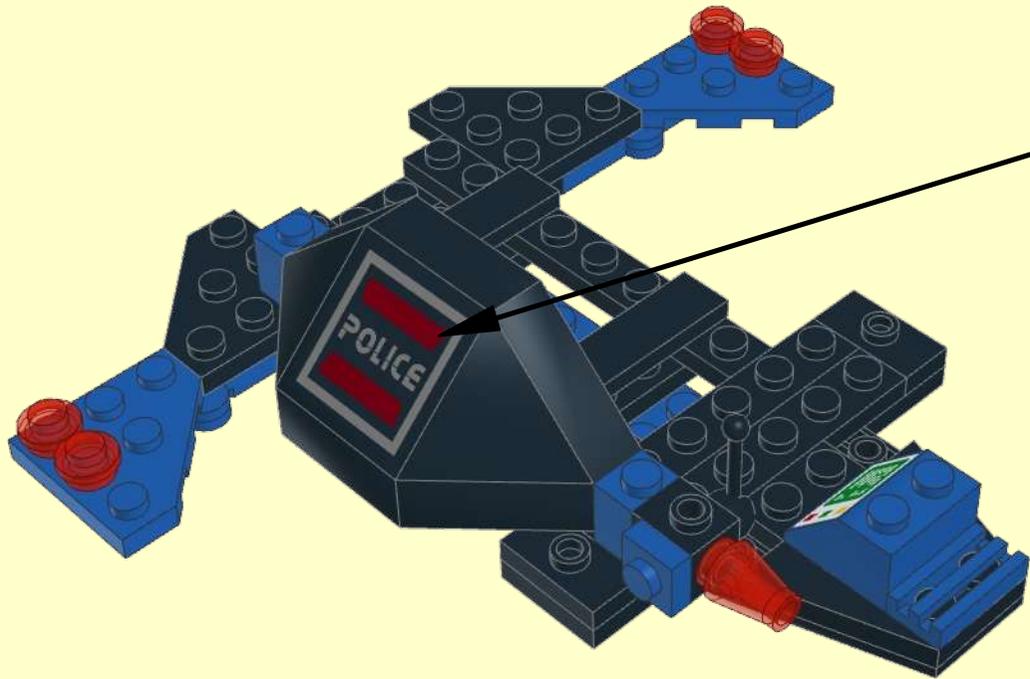

**1**

1x 1x 1x

**2**

1x 1x 1x 1x 1x

The inset diagrams show two steps of assembly. Step 1 shows a grey Technic arm being assembled with a blue 1x2 Technic brick and a grey 1x2 Technic brick. Step 2 shows the assembly of a blue Technic arm with a red light, using a blue 1x2 Technic brick, a black 1x2 Technic brick, a black axle, a blue 1x2 Technic brick, and a red light.

