




6694 CAR CAMPER (1984) B-model

TRUCK






instructions by Stéphane Anquetil


1

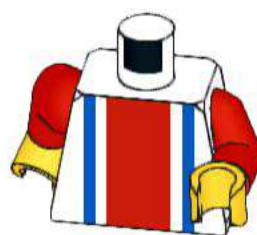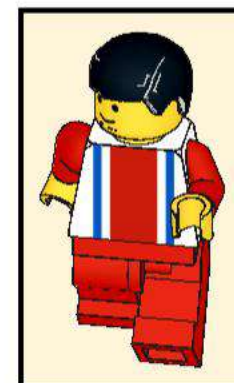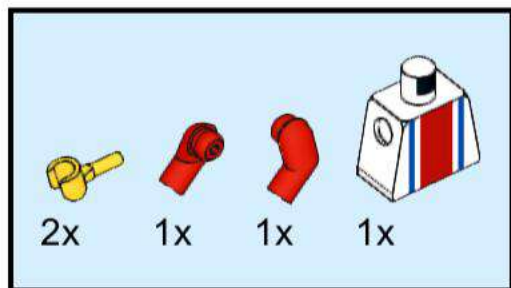

2

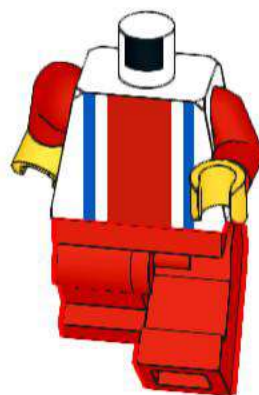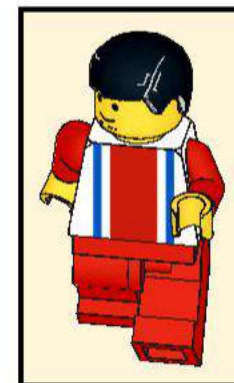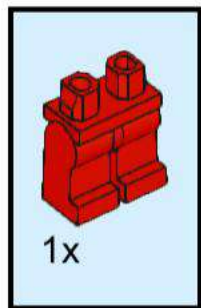




3

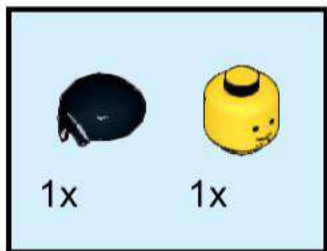



4





5

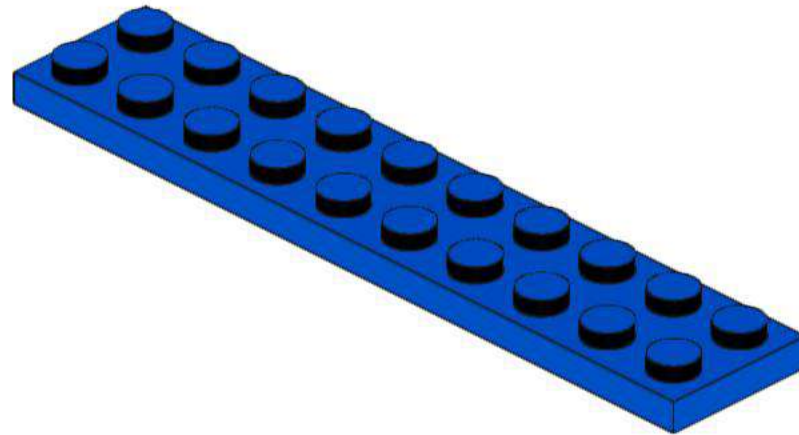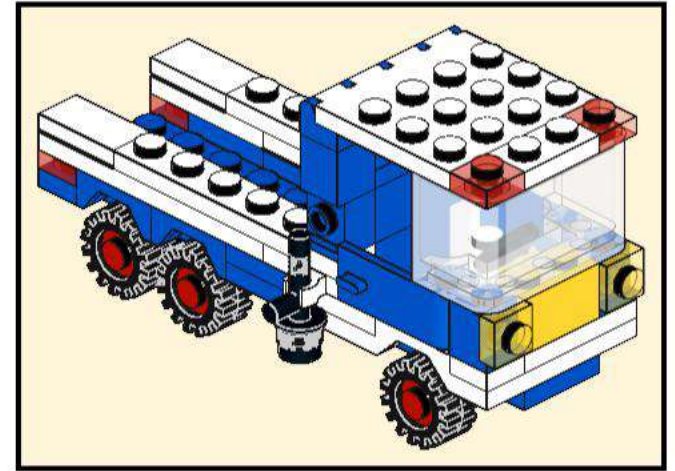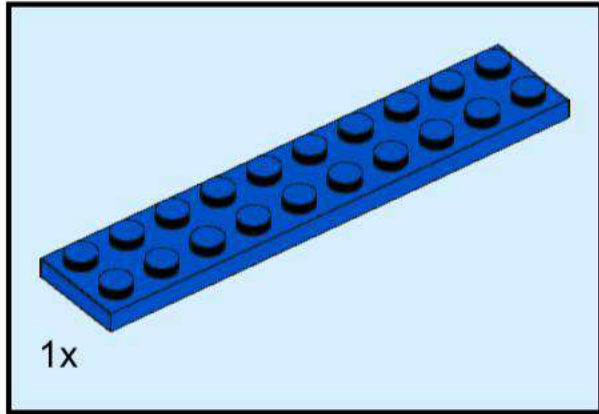



6

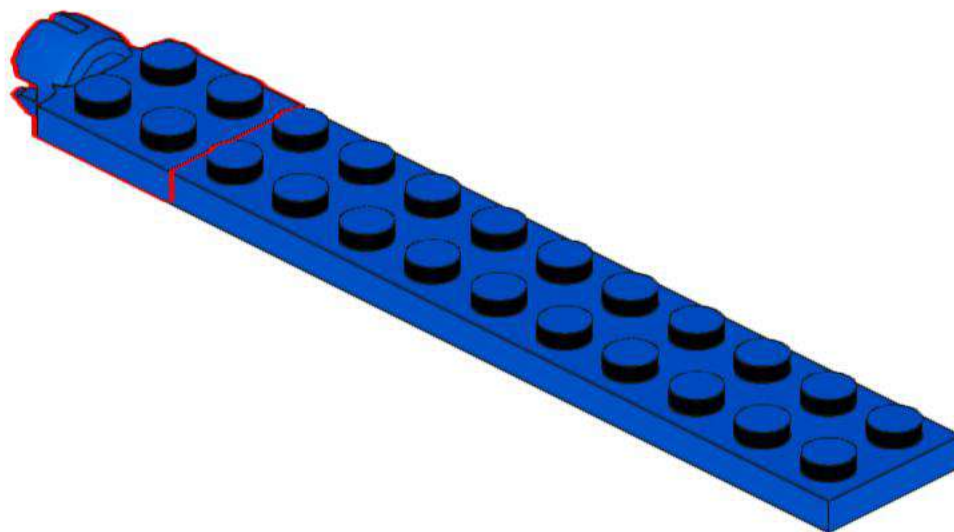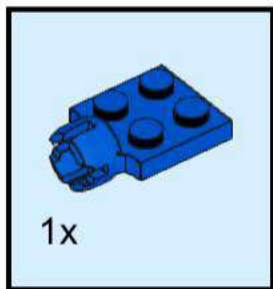



7

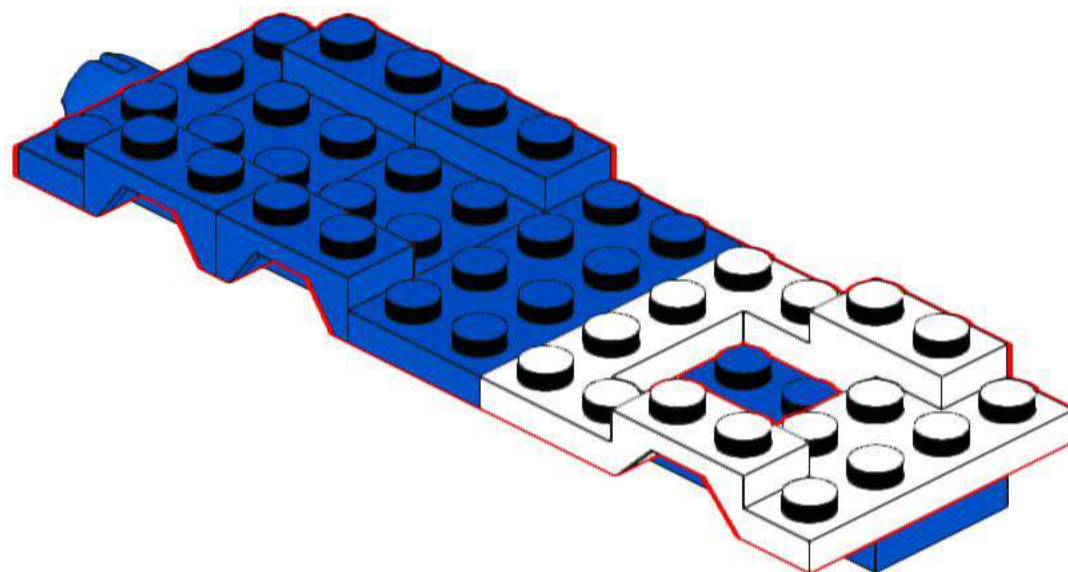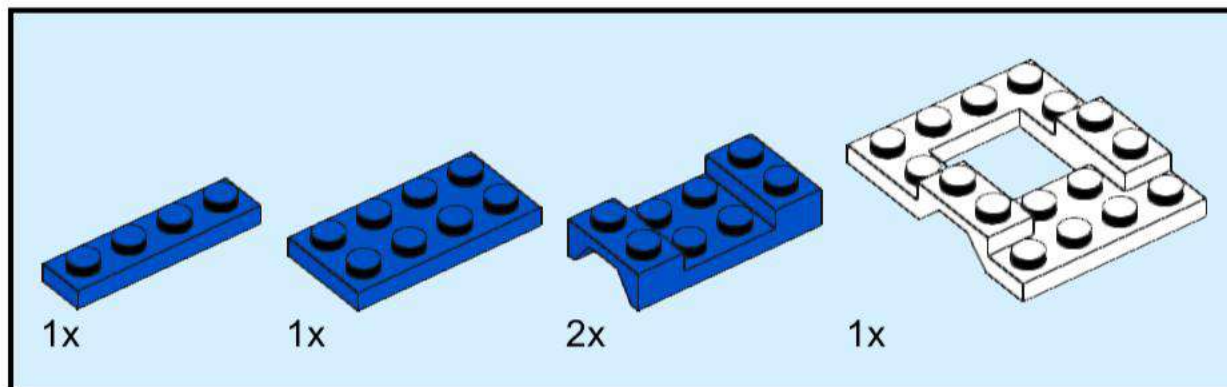



8

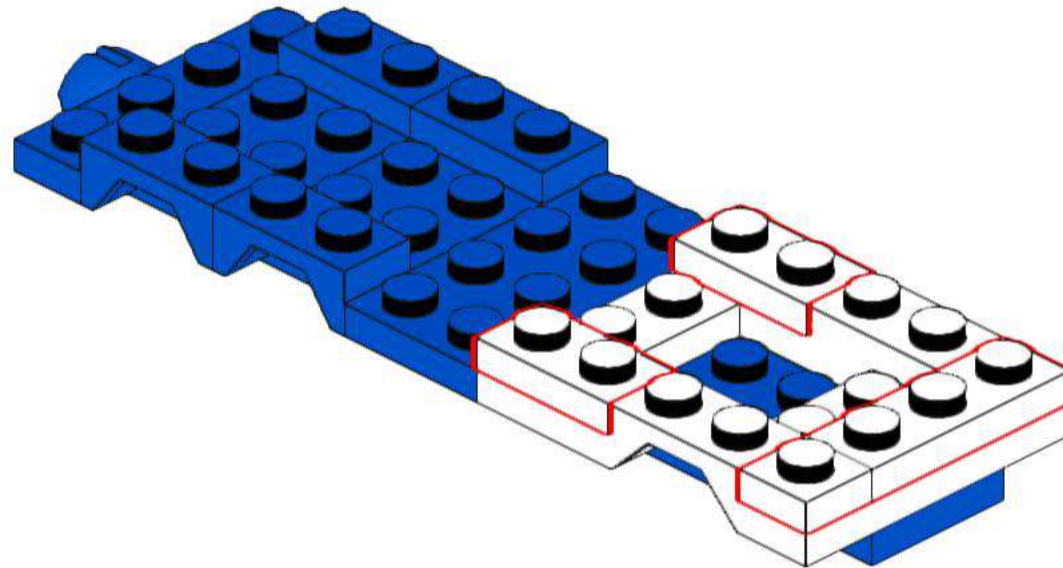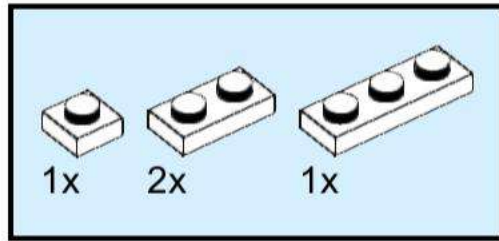



9

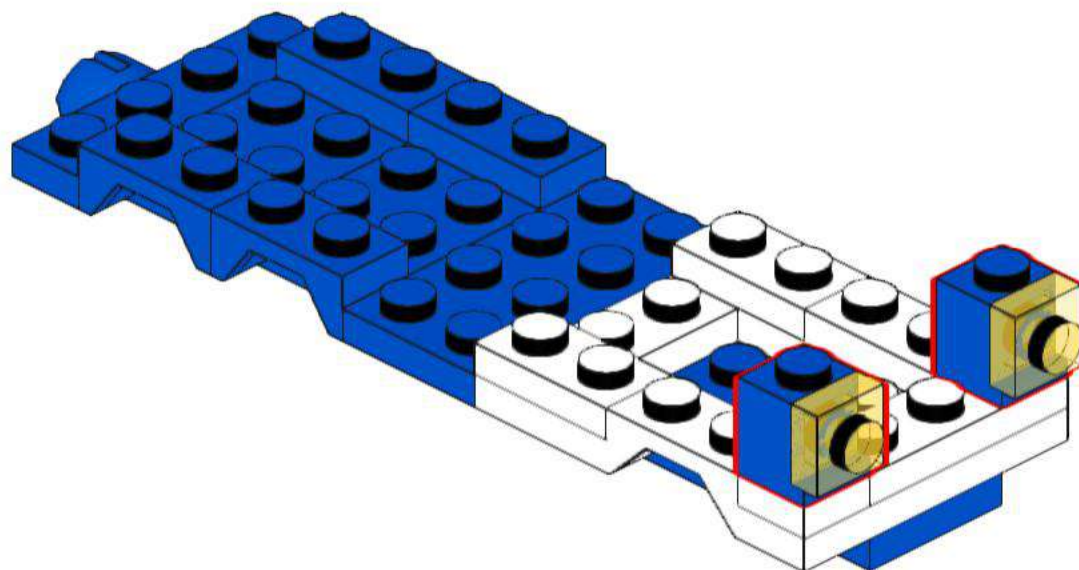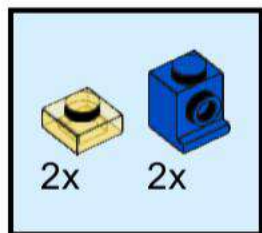



10

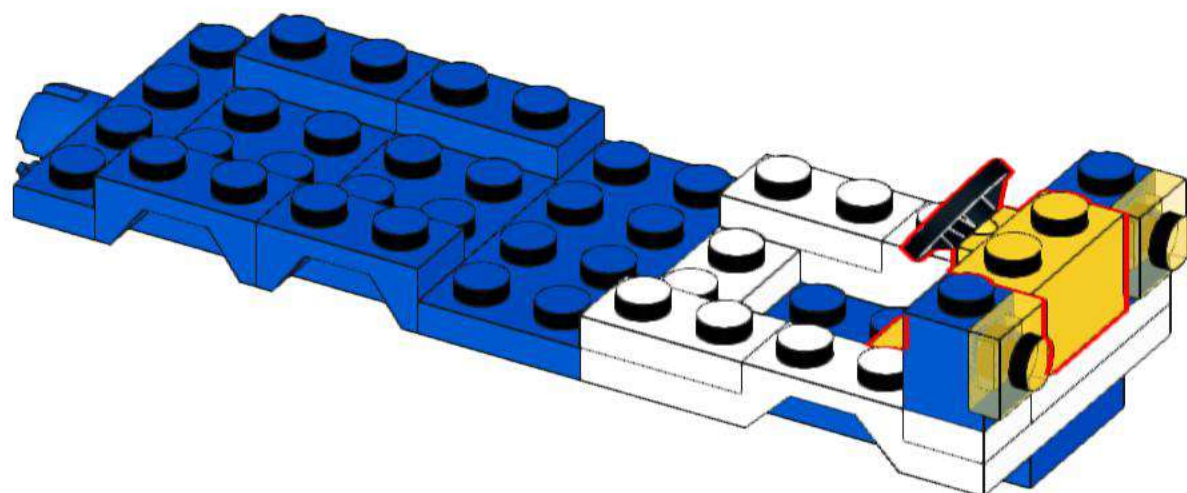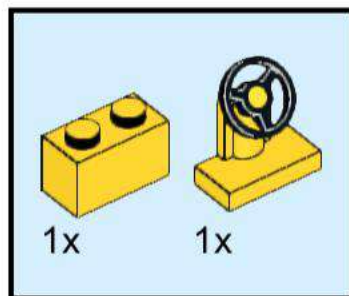



11

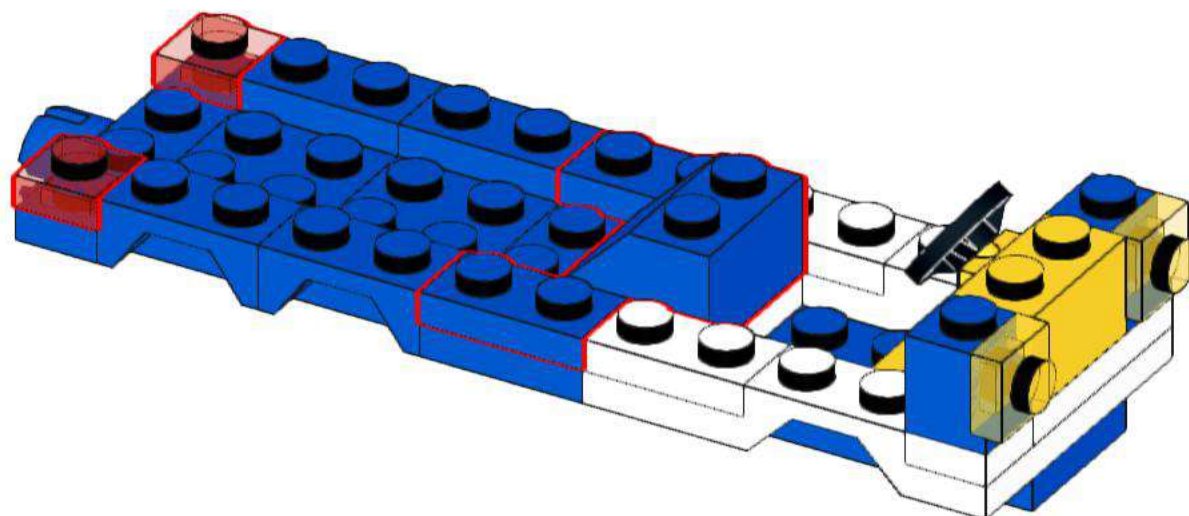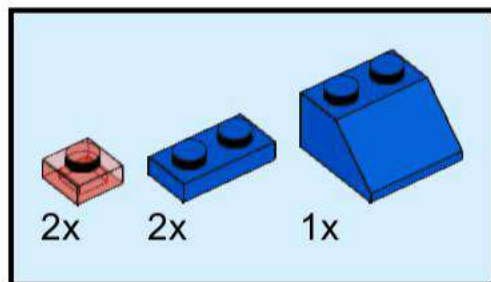



12

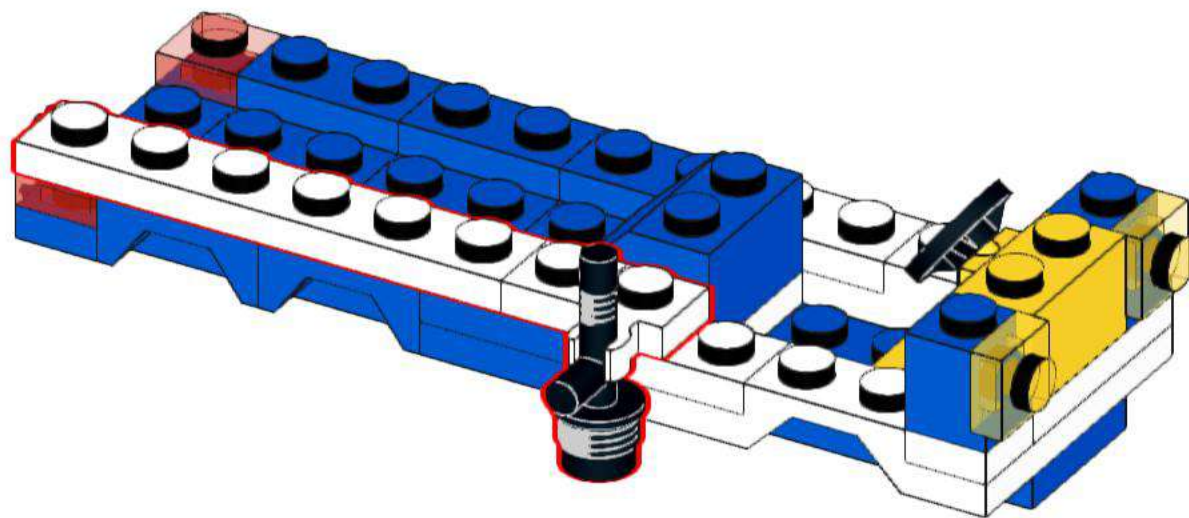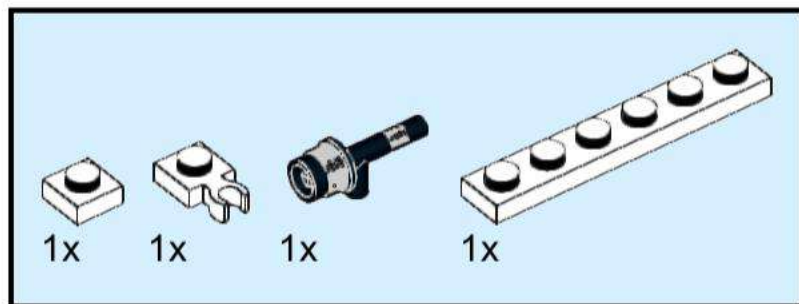



13

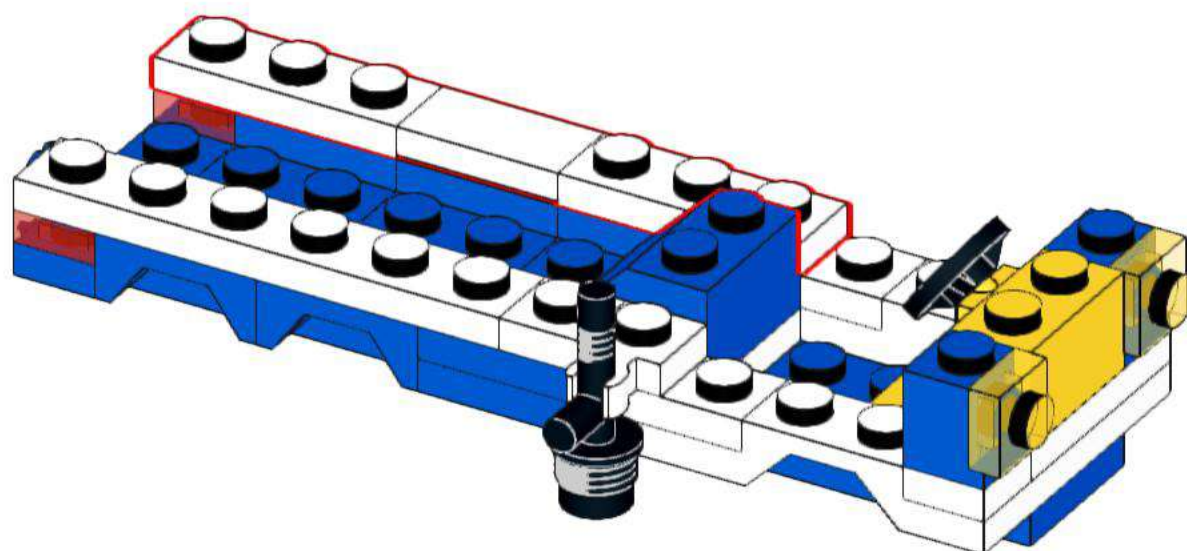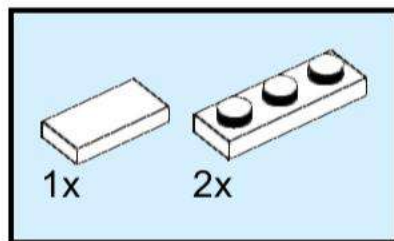



14

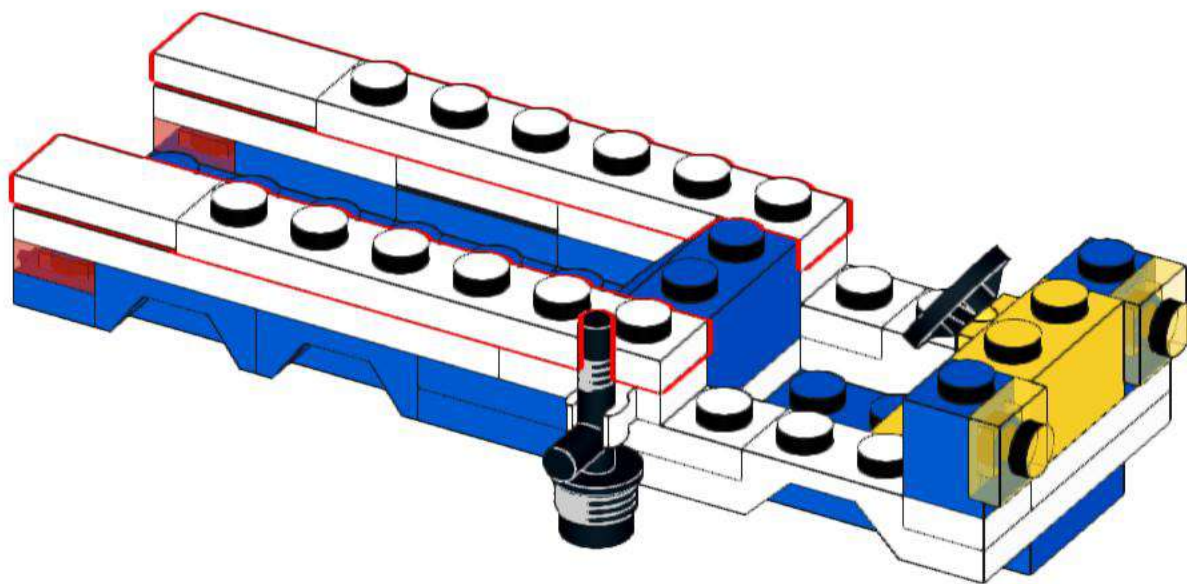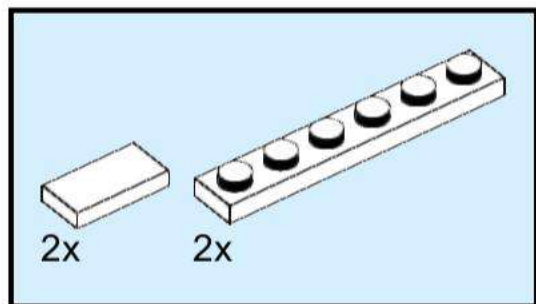



15

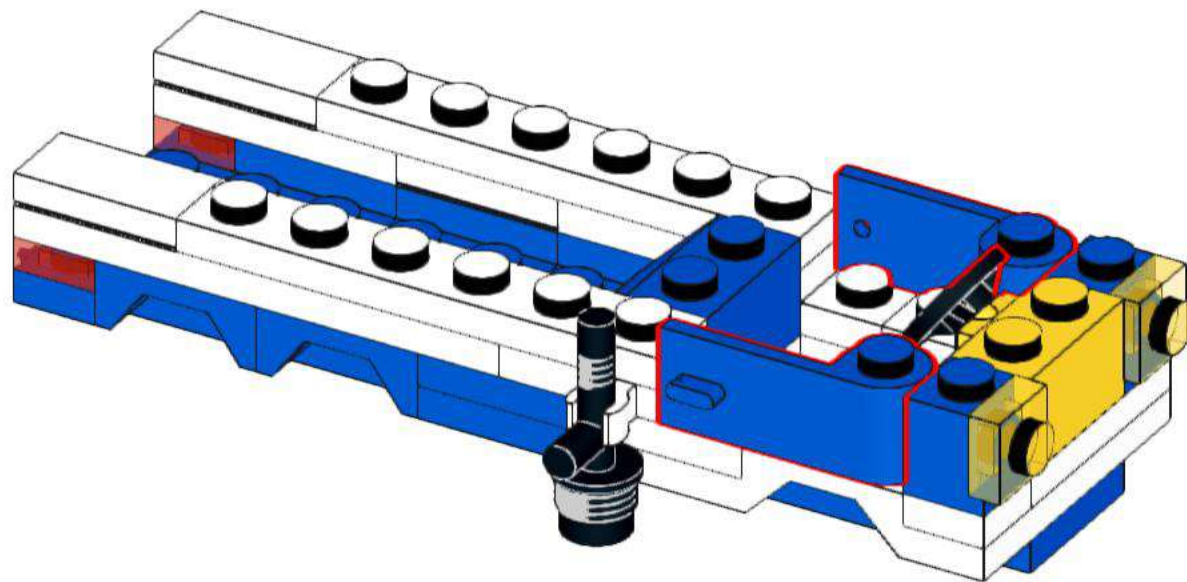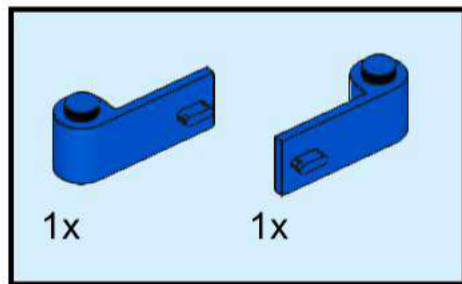



16

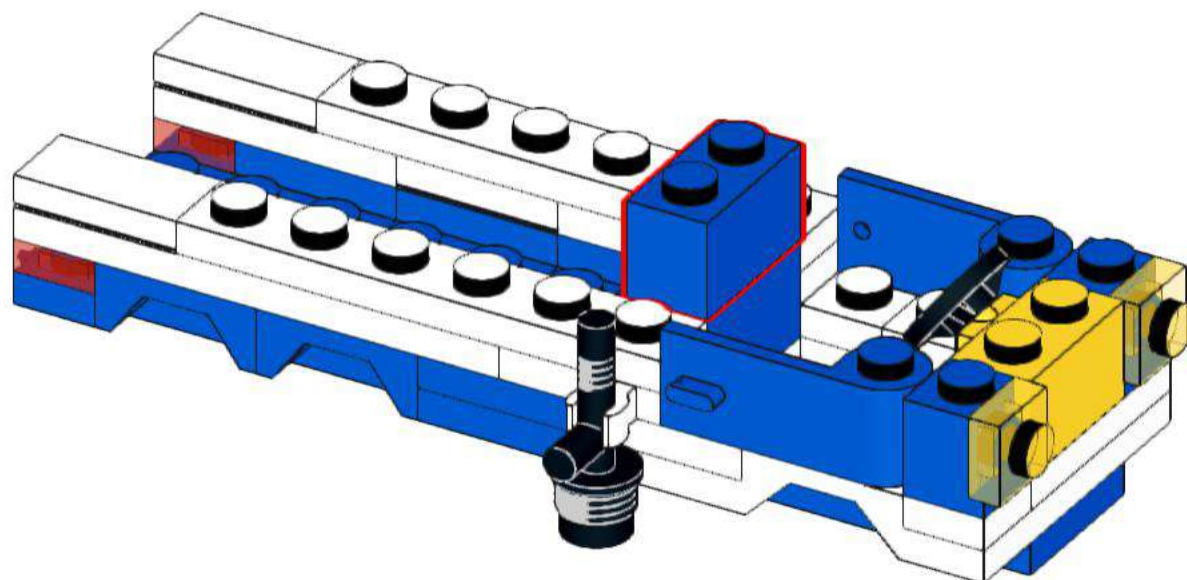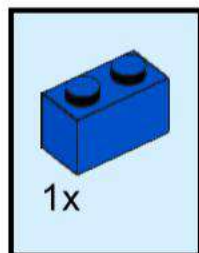



17

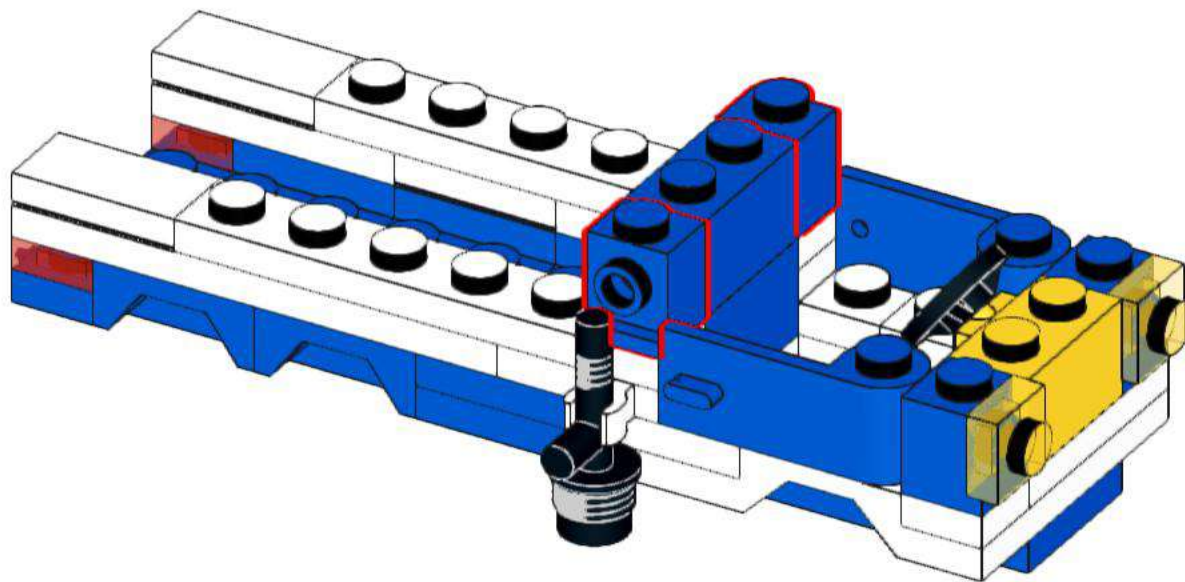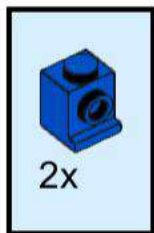



18

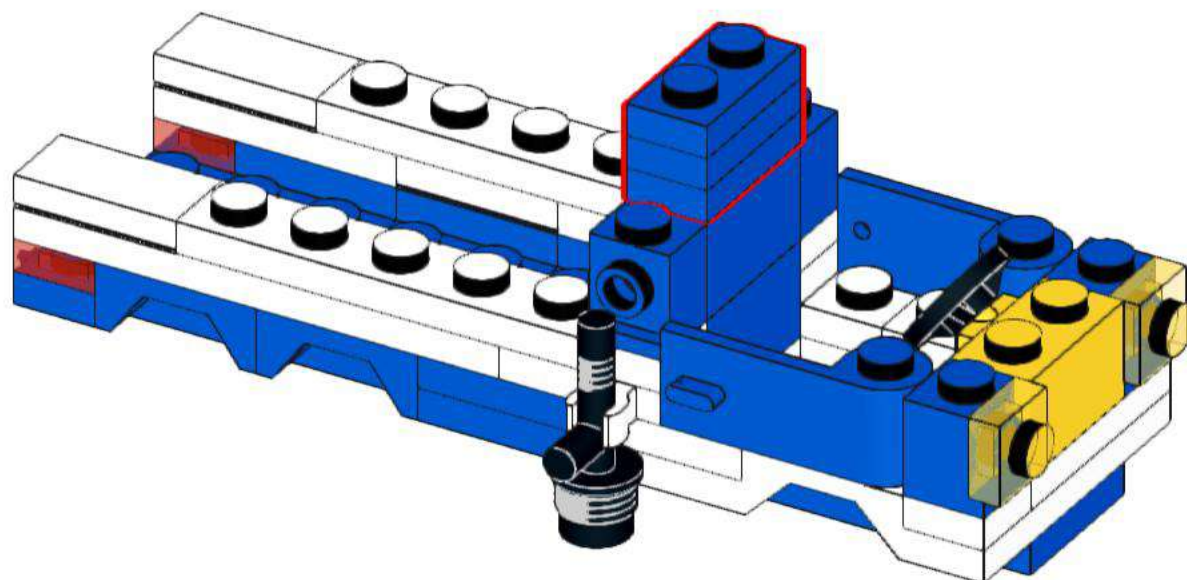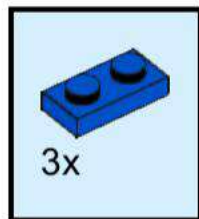



19

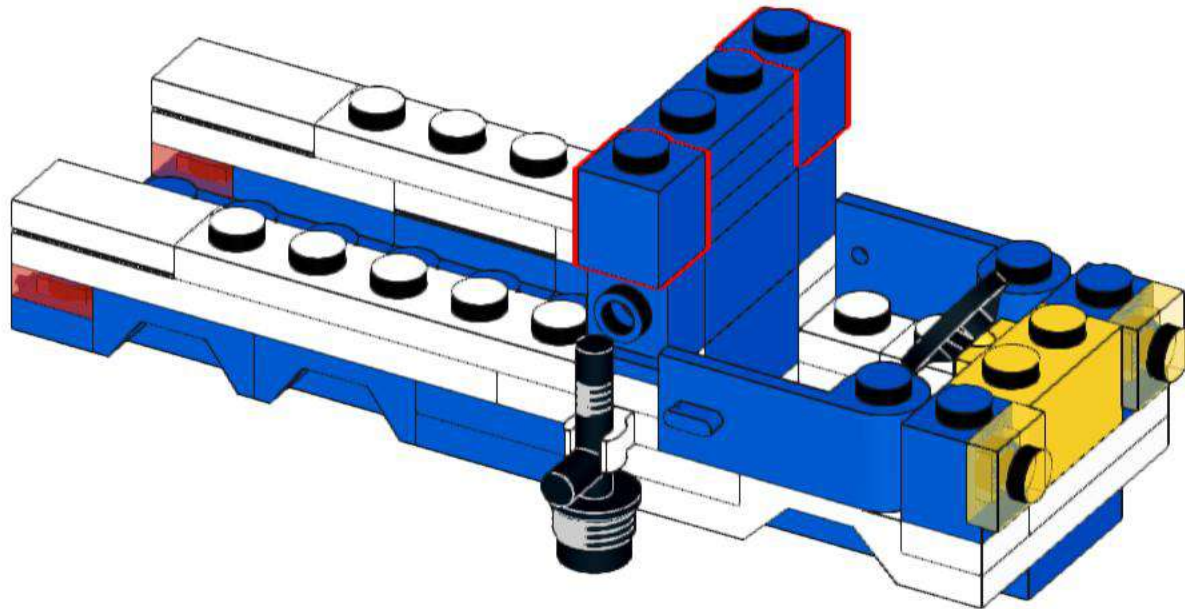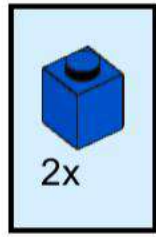



20

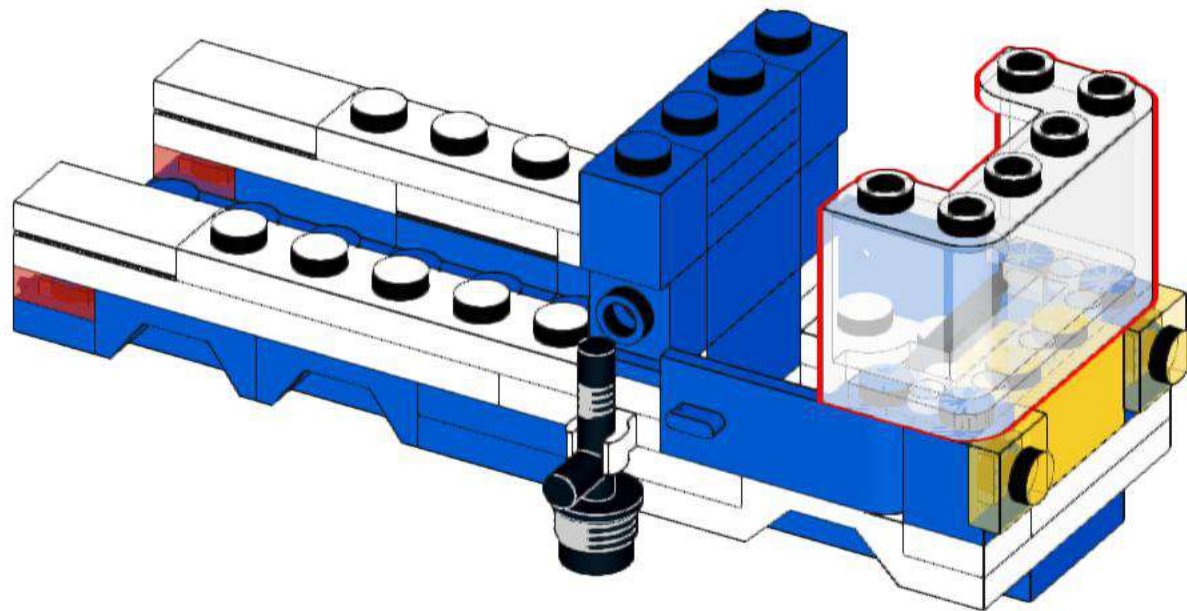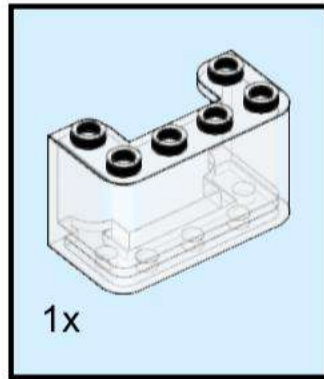



21

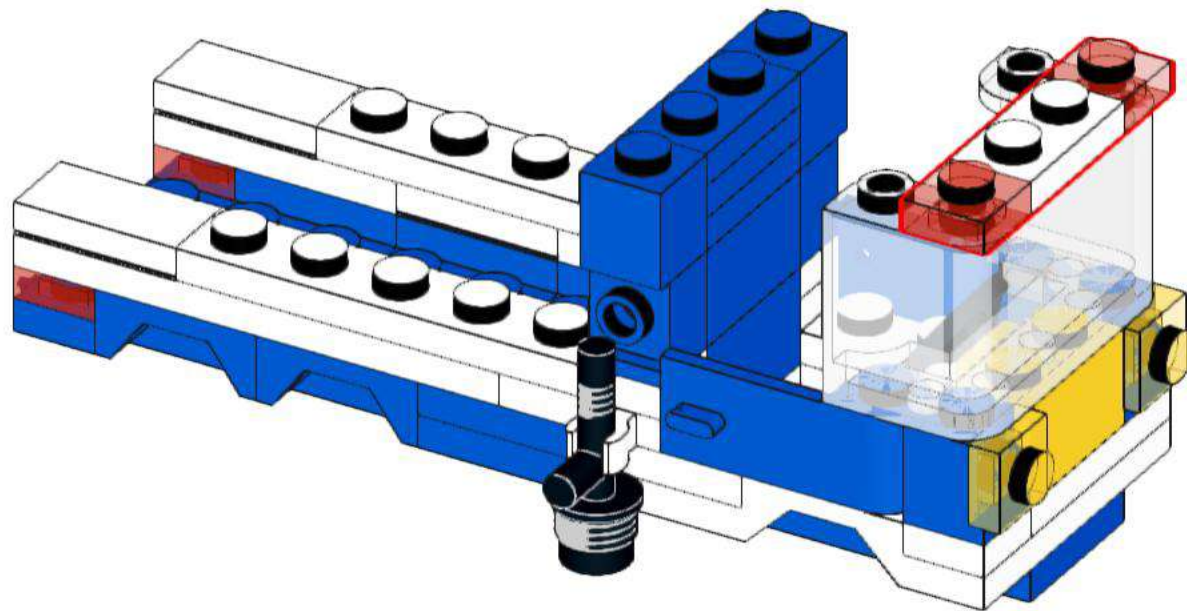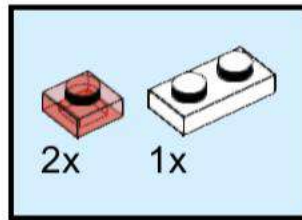

22

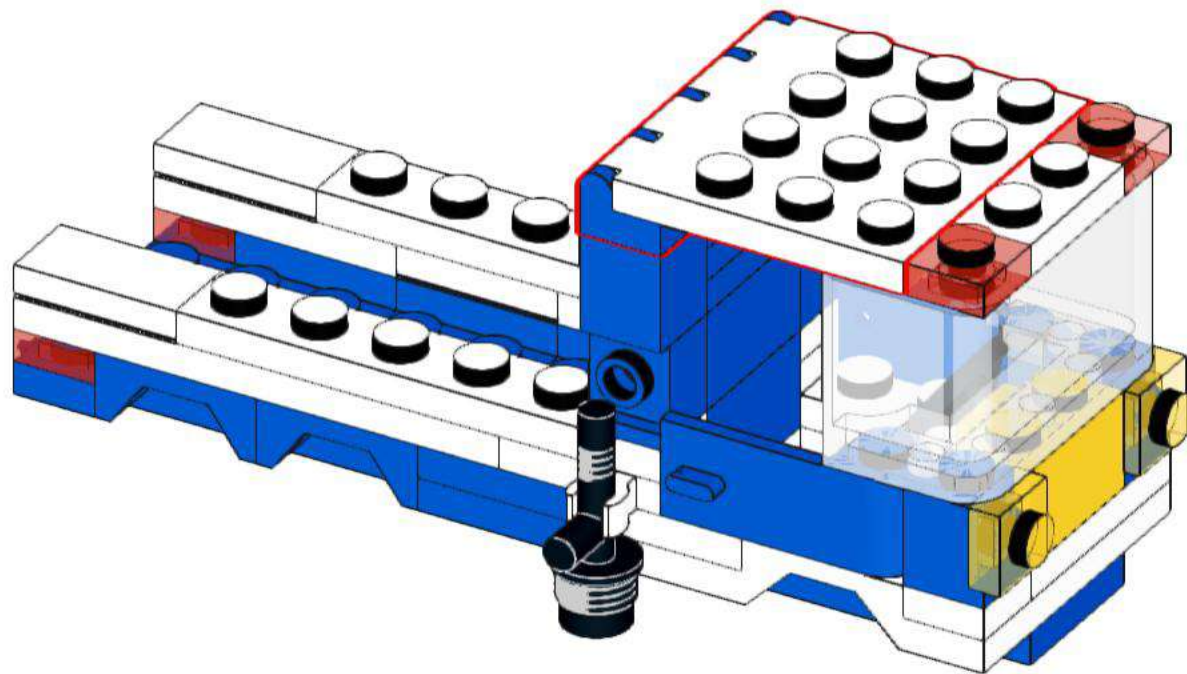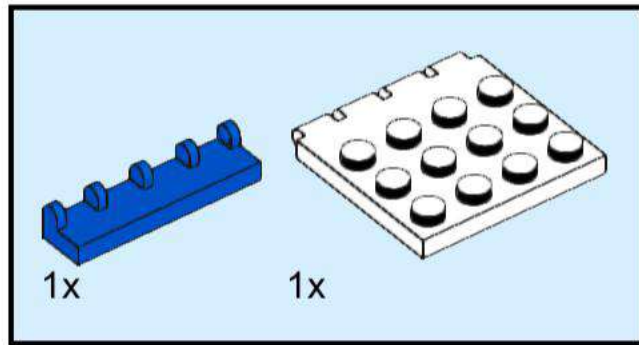

23

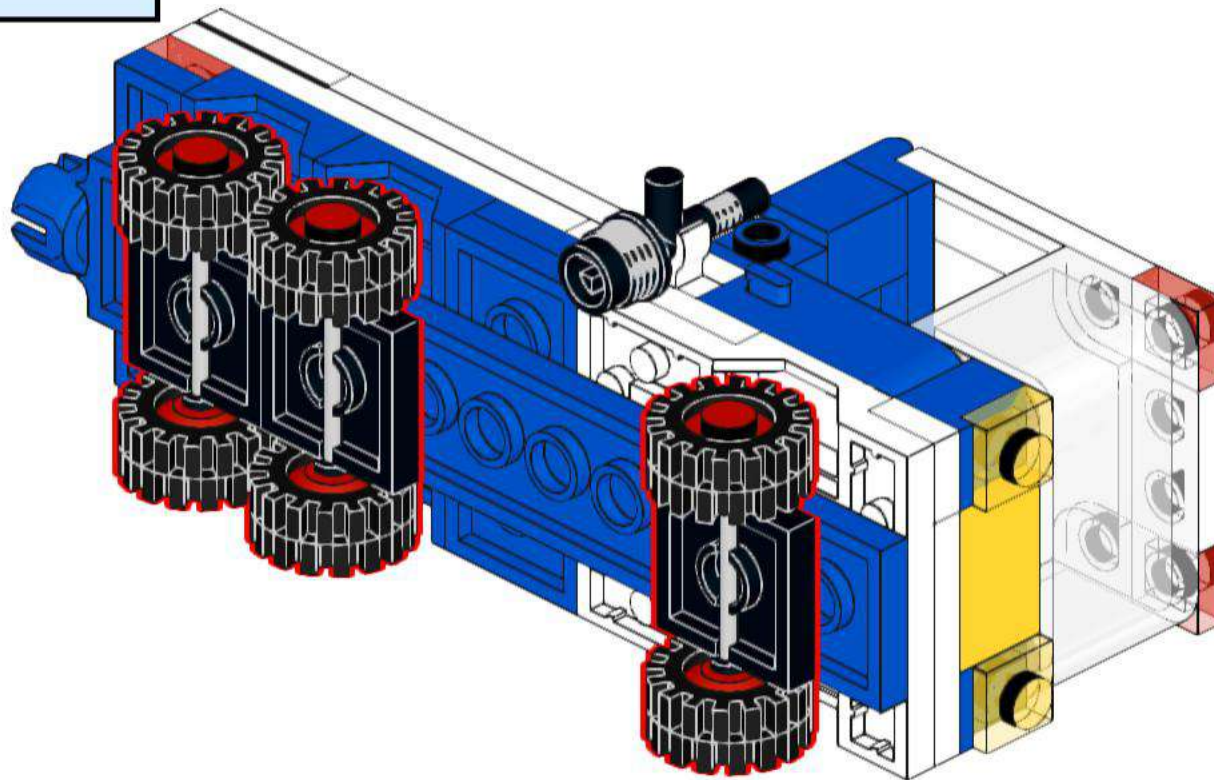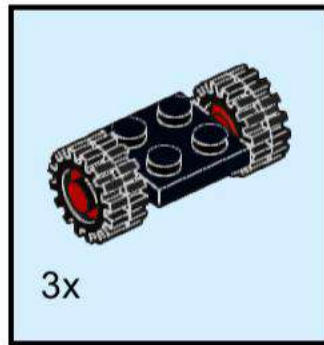

24

