

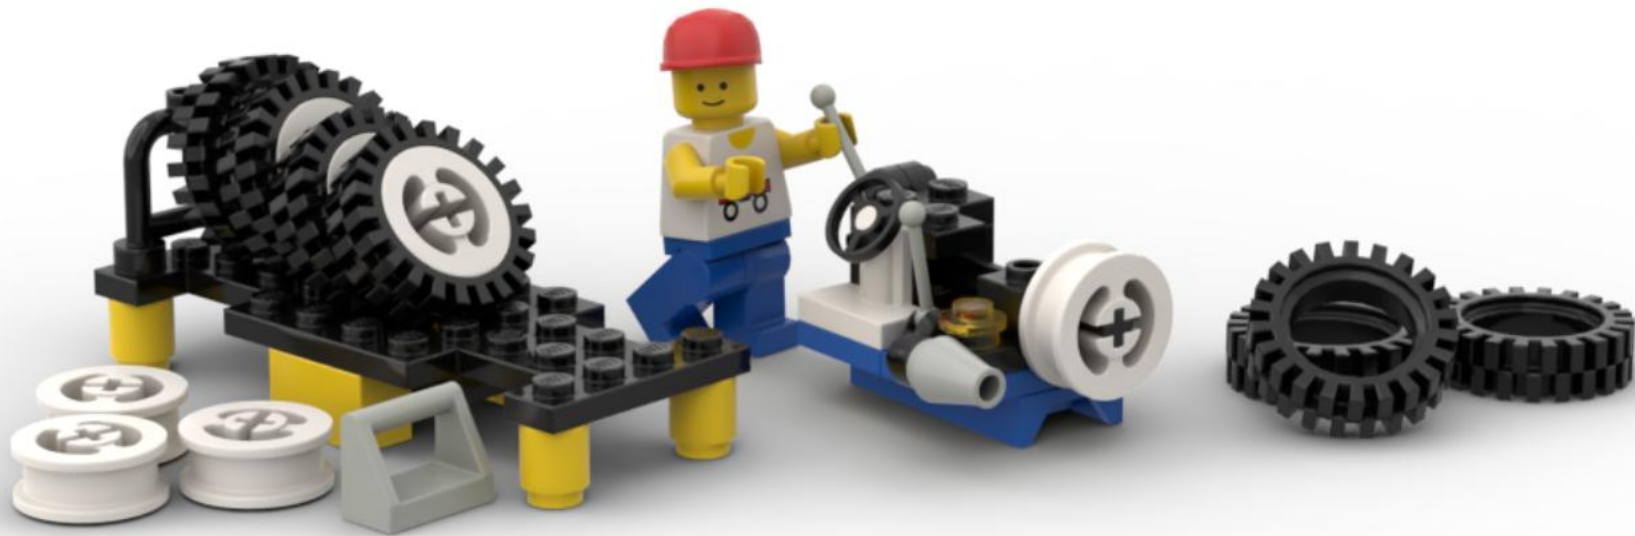


6641 Back of the box build 2



Instructions created by se1977

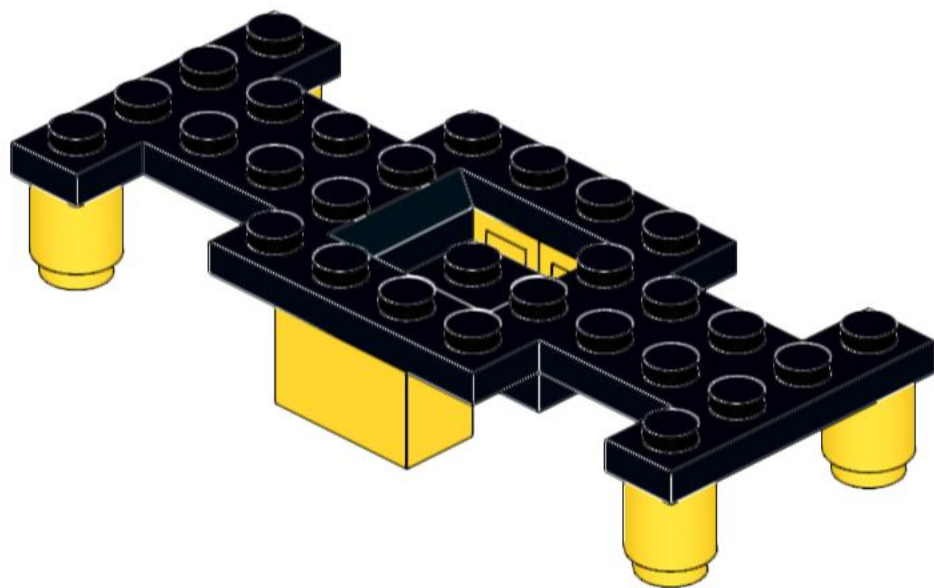



1

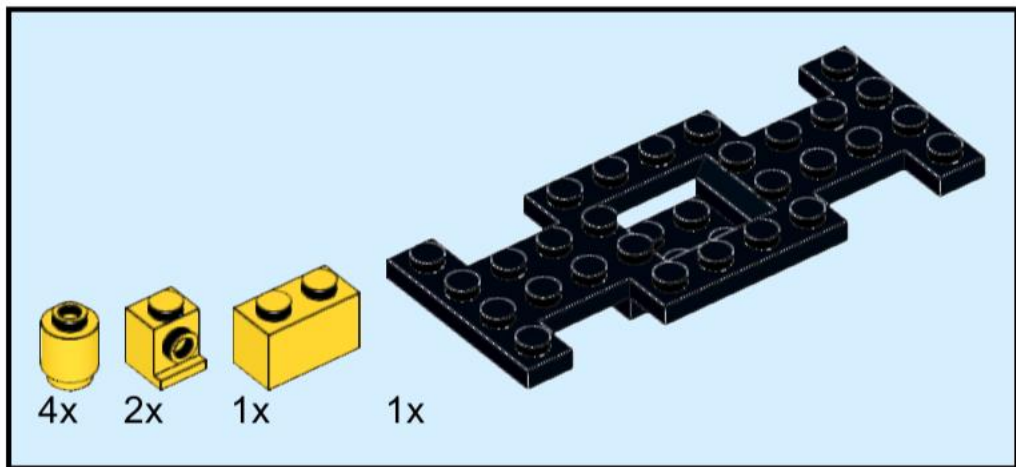



2

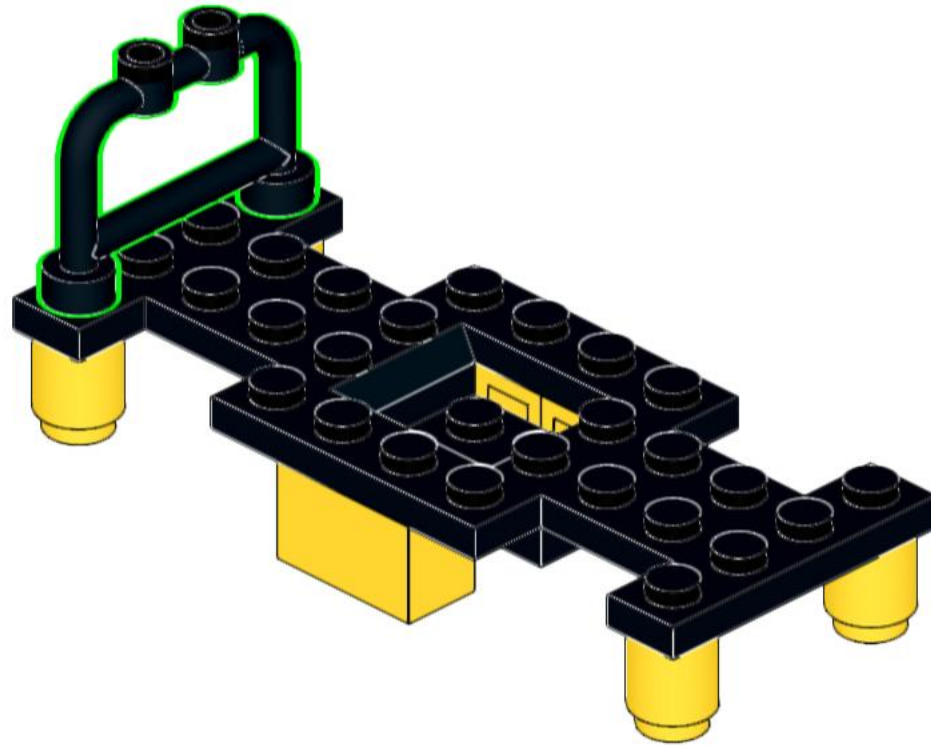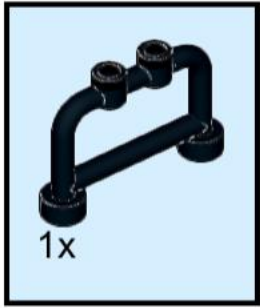



3

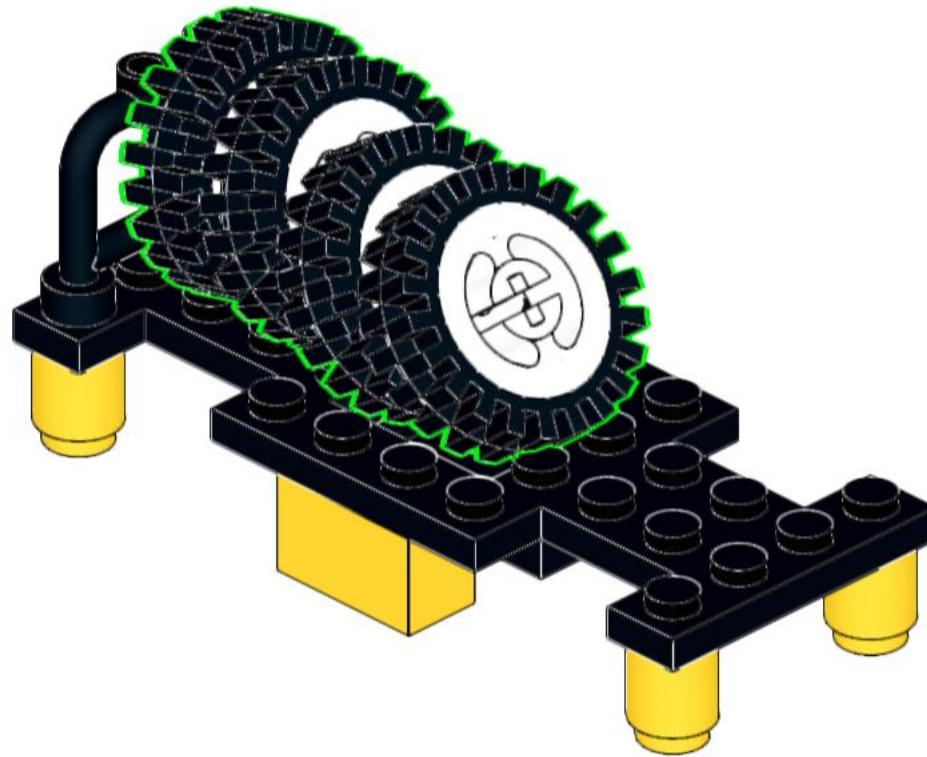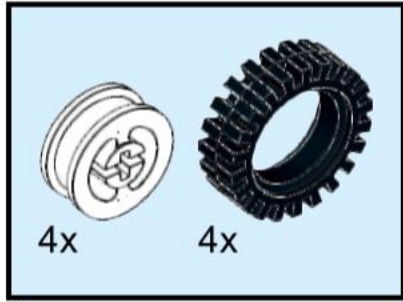



4

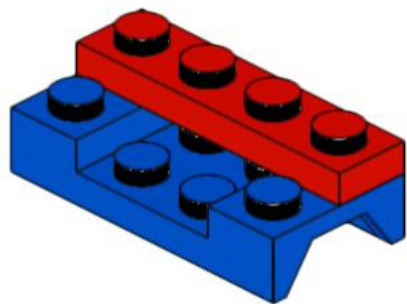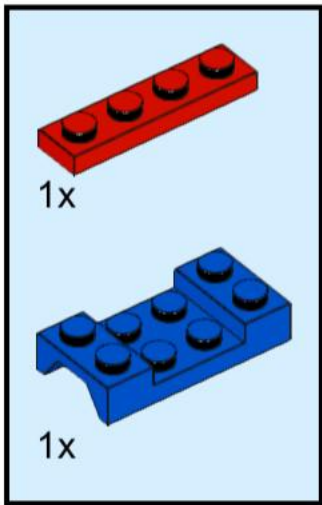



5

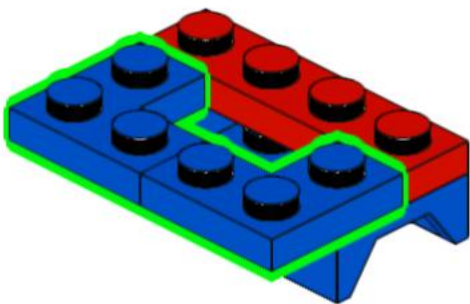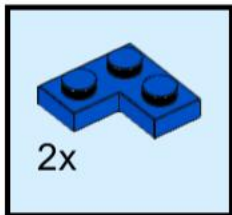



6

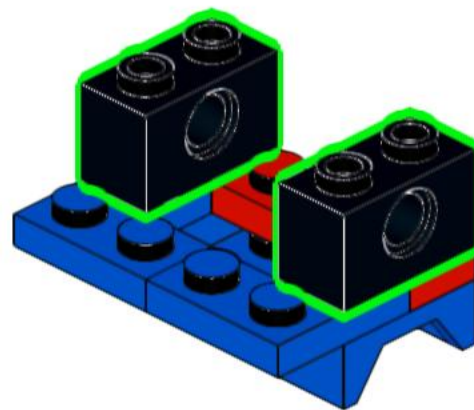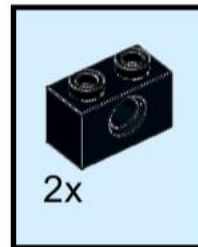



7

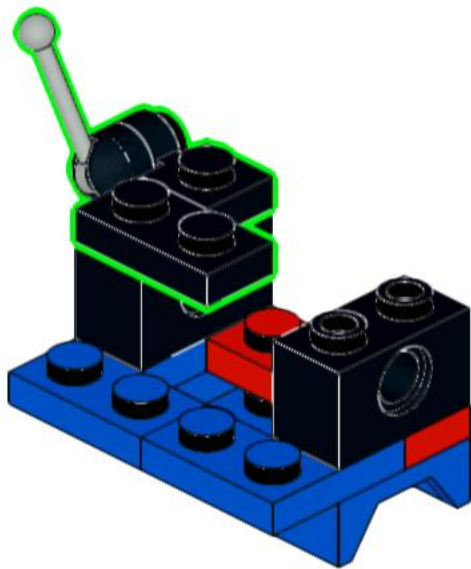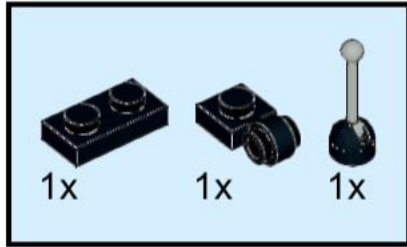



8

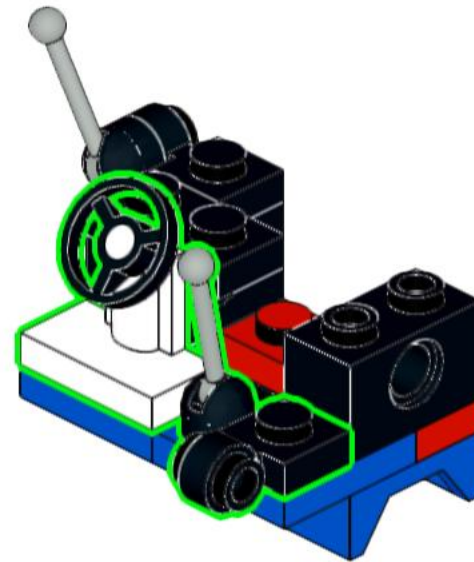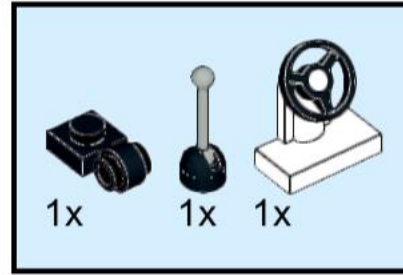




# 9

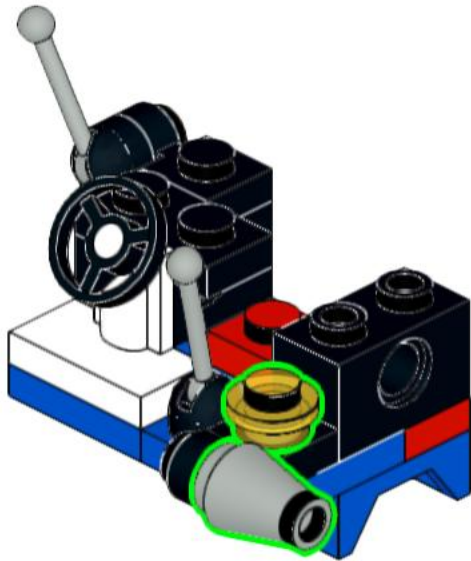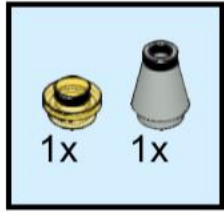

# 10

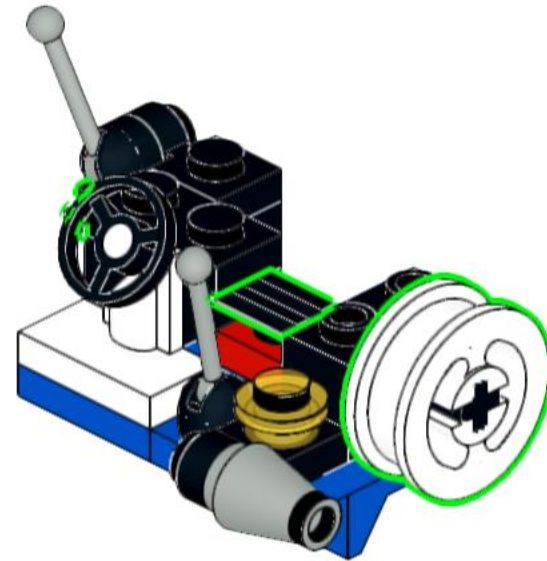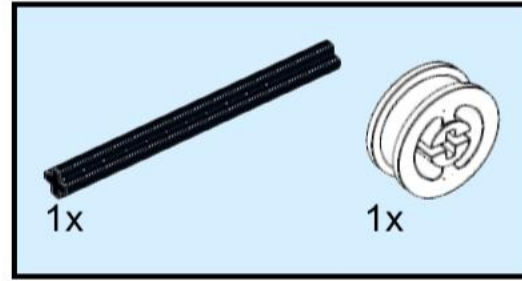

# 11

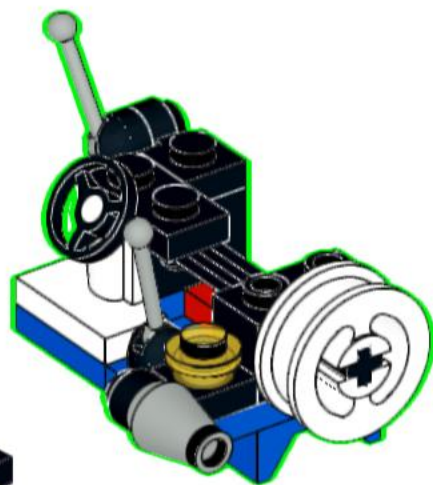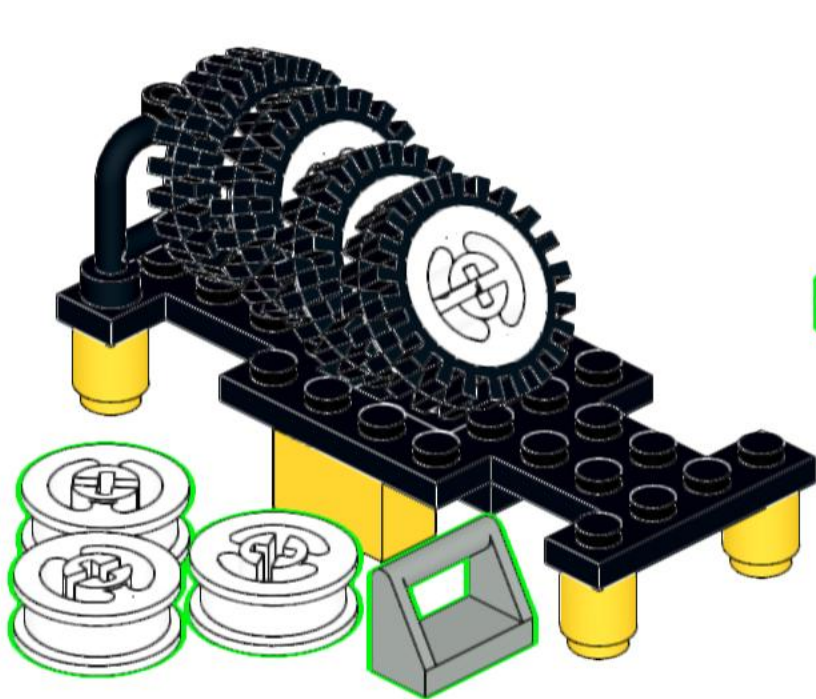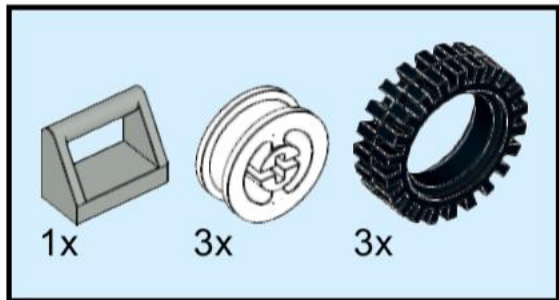



1x  
3023  
Black

2x  
4081b  
Black


2x  
4592c03  
Black

2x  
3700  
Black


7x  
3483  
Black

1x  
4083  
Black

1x  
3706  
Black

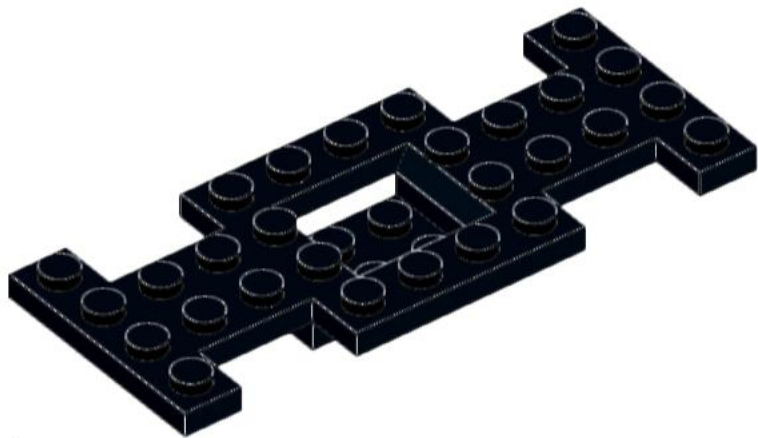

1x  
4212b  
Black

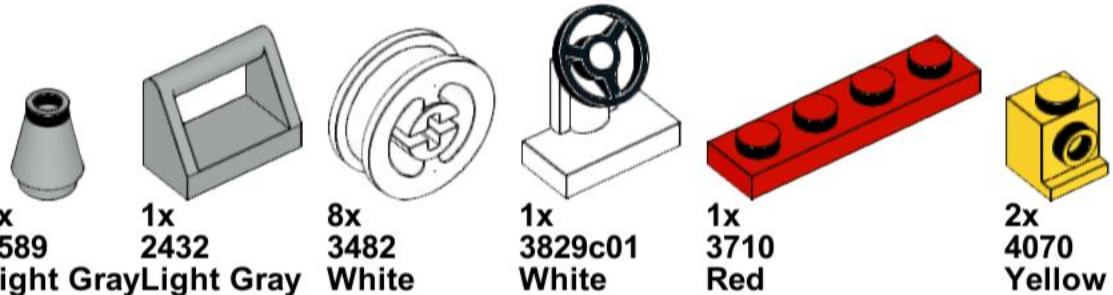

1x  
4589  
Light Gray


1x  
2432  
Light Gray

8x  
3482  
White

1x  
3829c01  
White

1x  
3710  
Red

2x  
4070  
Yellow

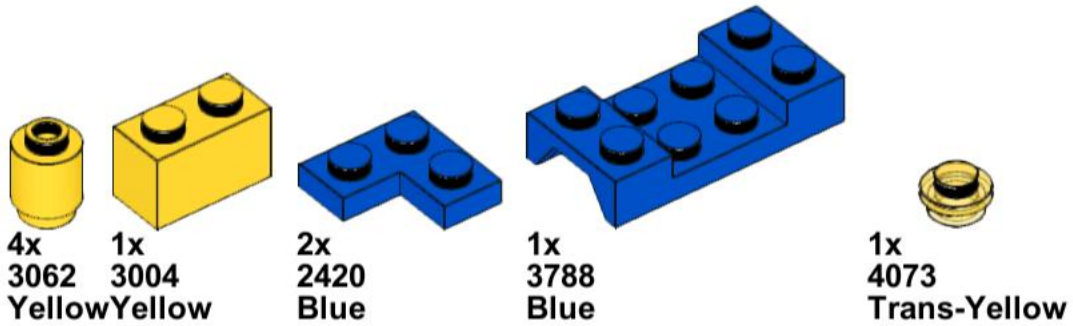

4x  
3062  
Yellow

1x  
3004  
Yellow

2x  
2420  
Blue

1x  
3788  
Blue

1x  
4073  
Trans-Yellow