

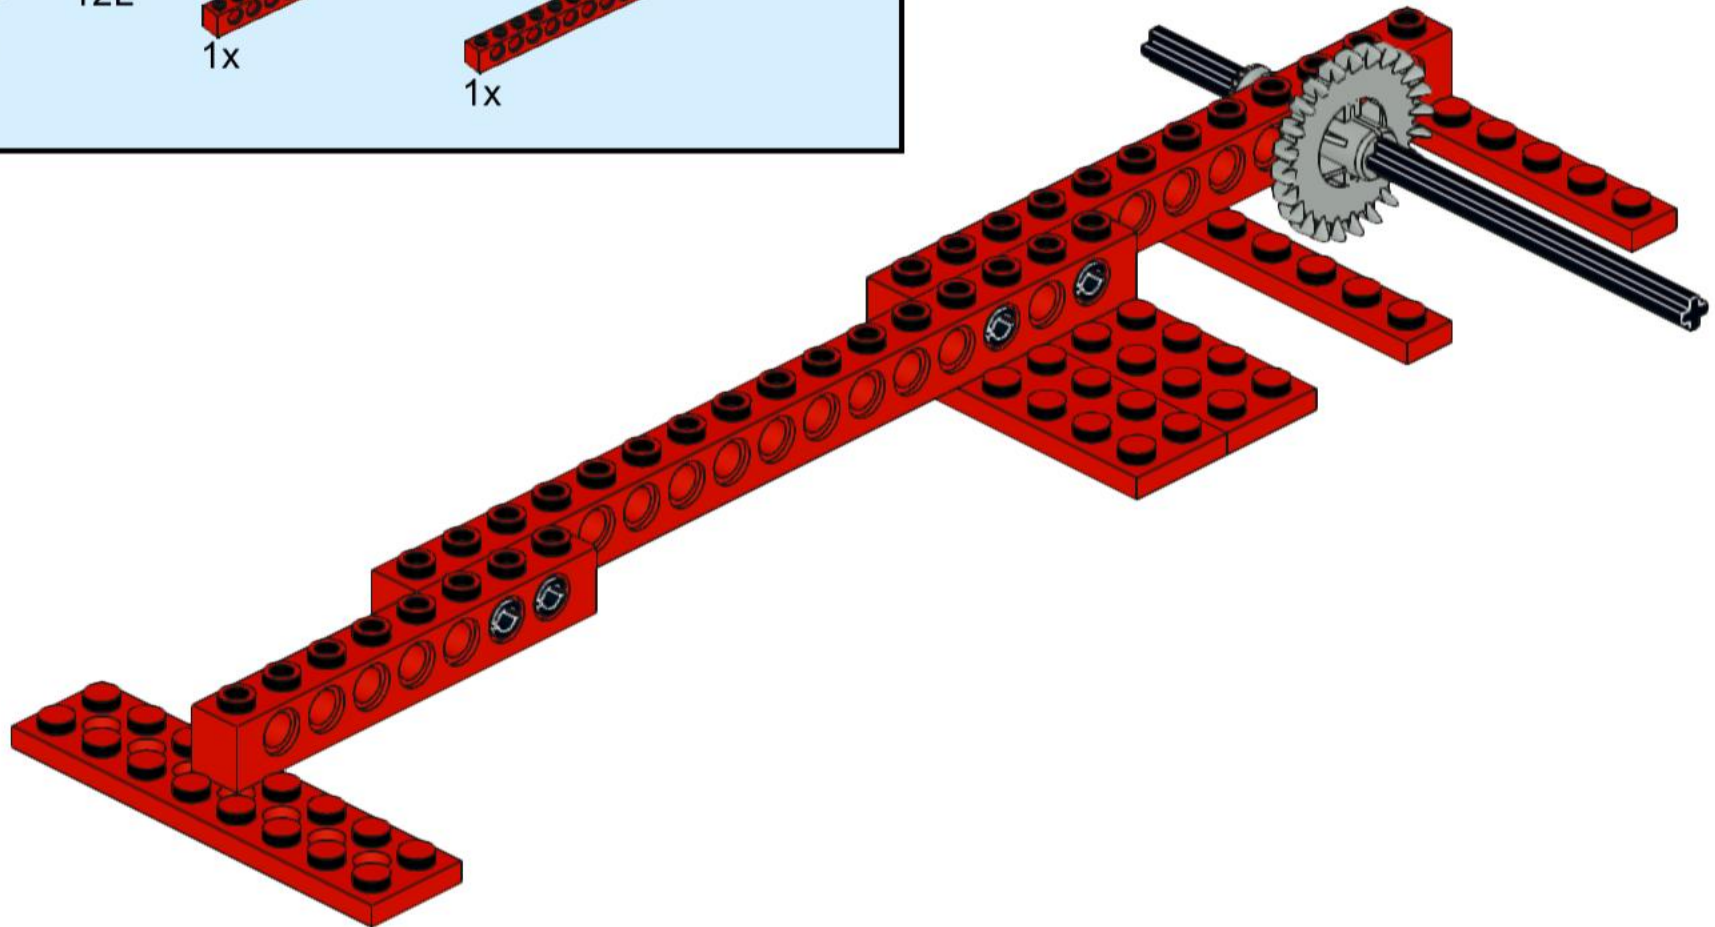
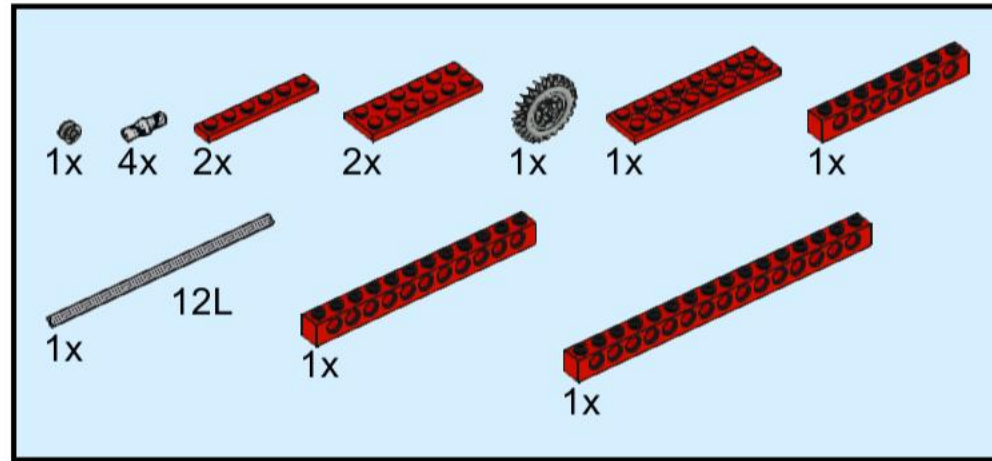



1

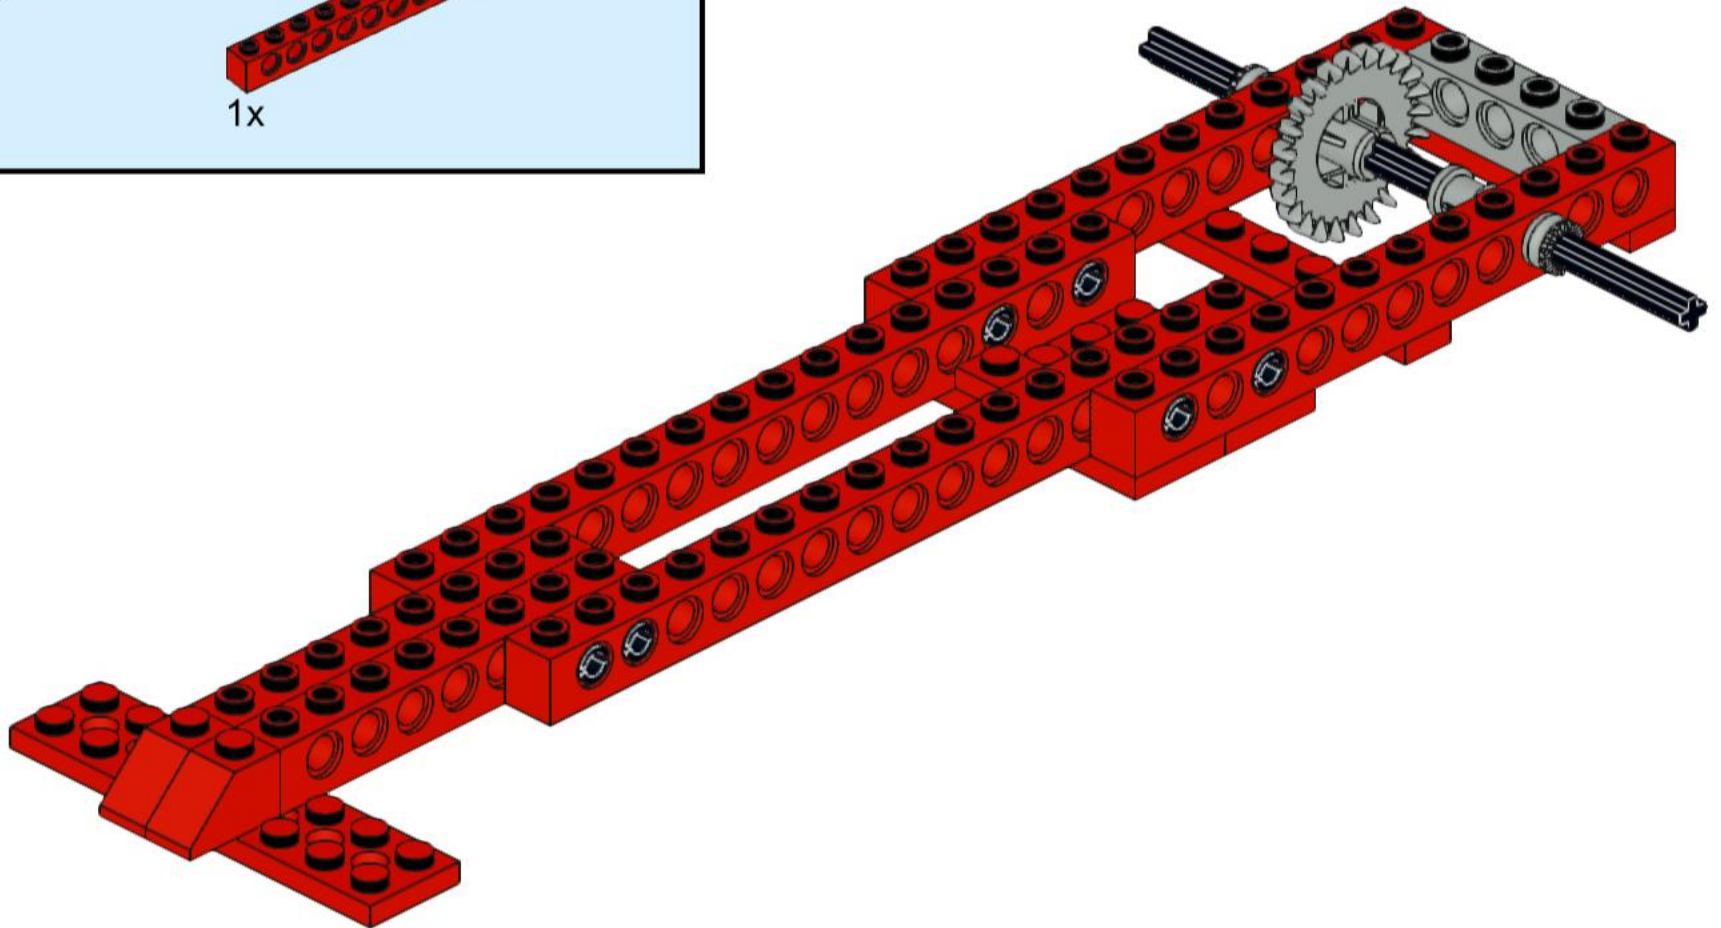

2

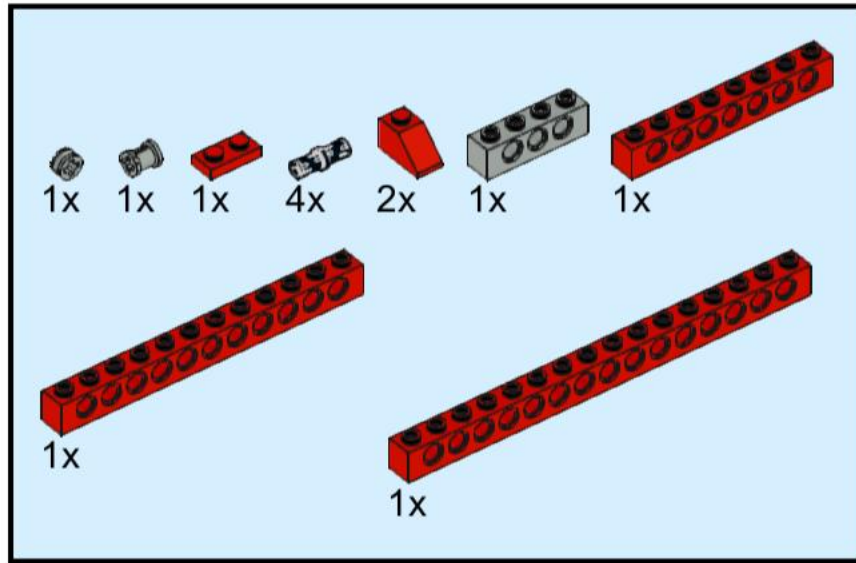


3


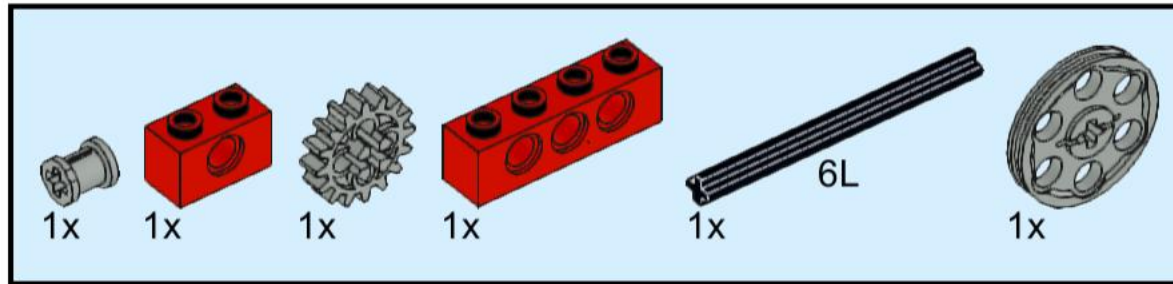


1x Rubber
Band Medium
square cross
section
(71156)




Loop rubber band
over pulley prior to
installing
sub-assembly.

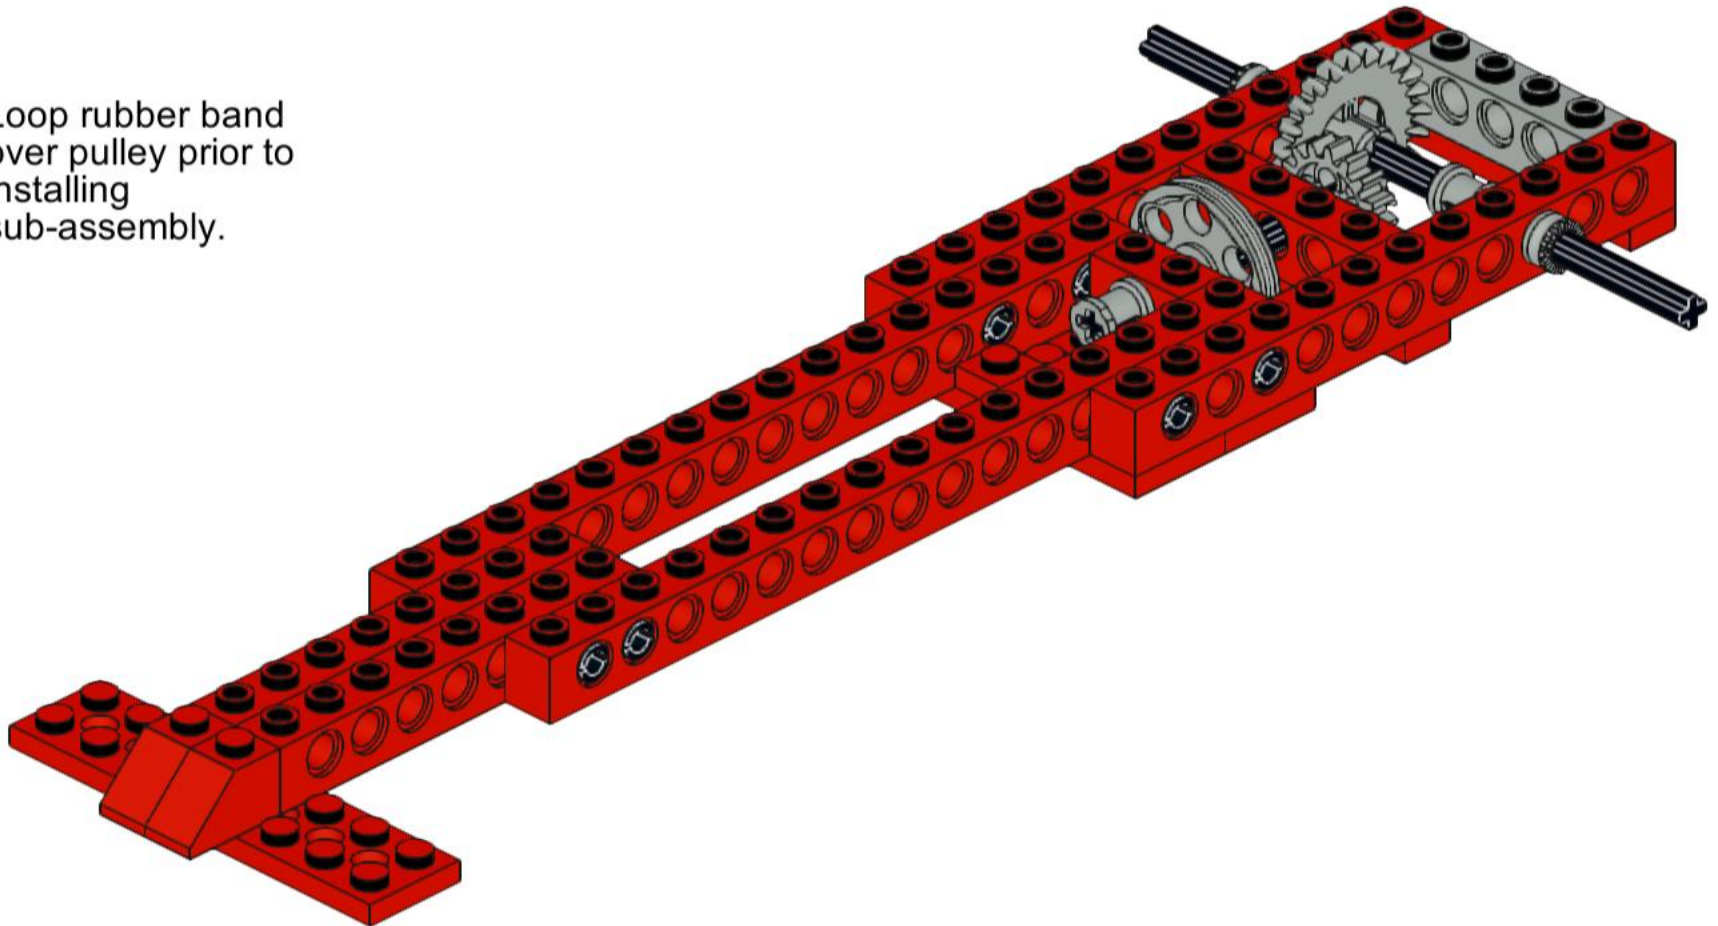



4

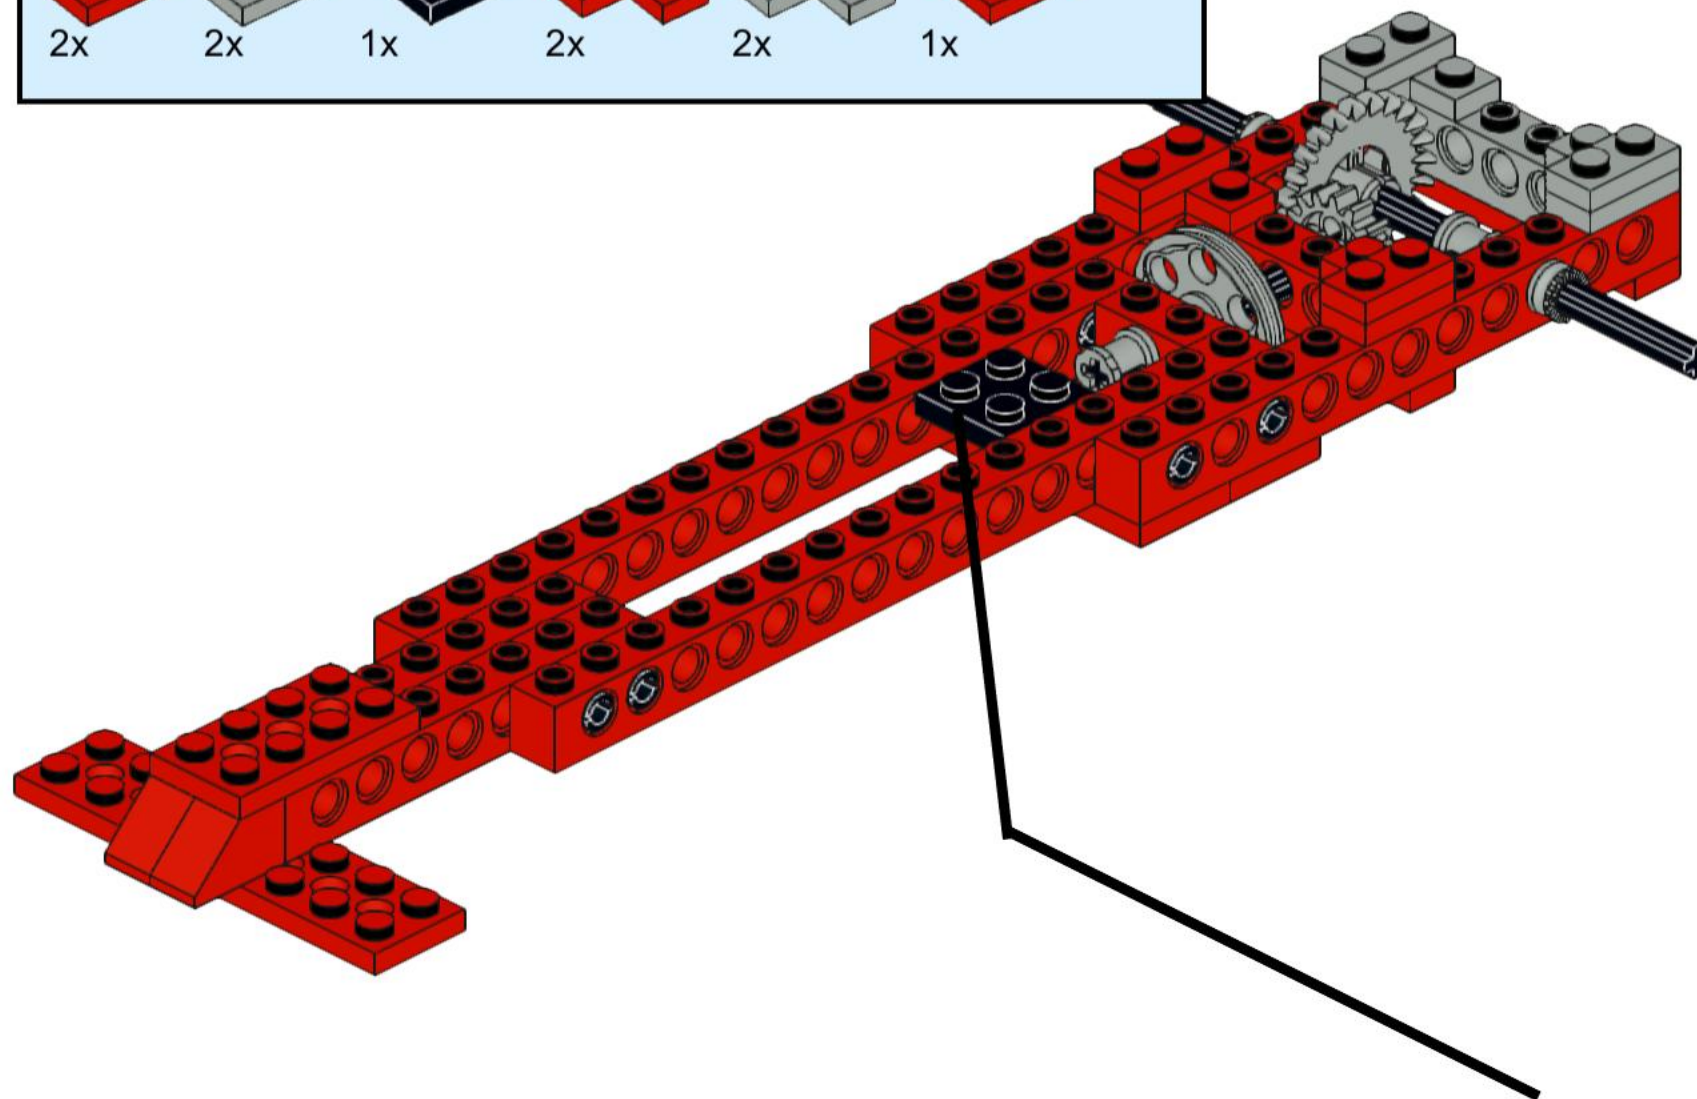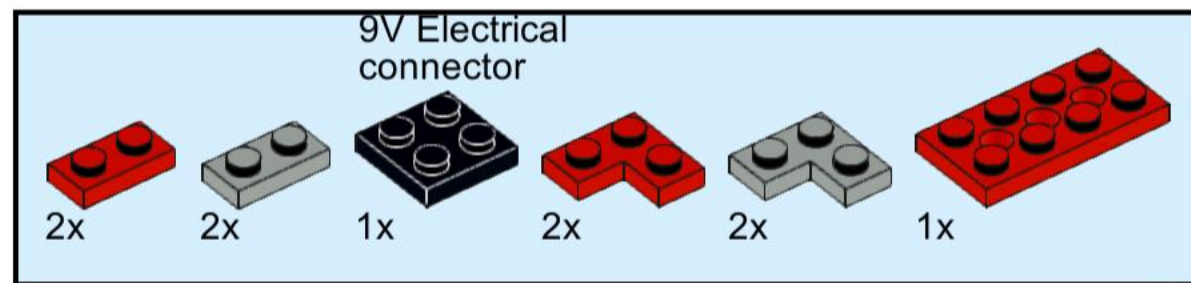


5

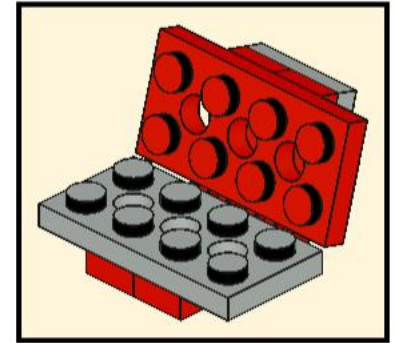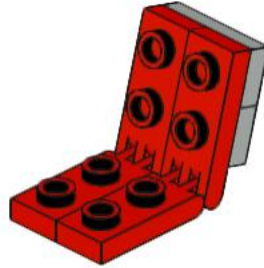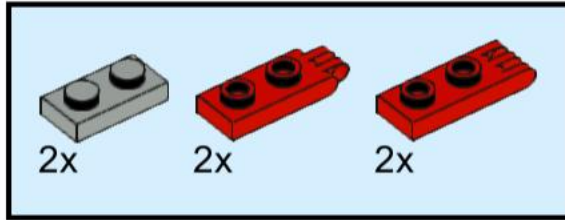

6

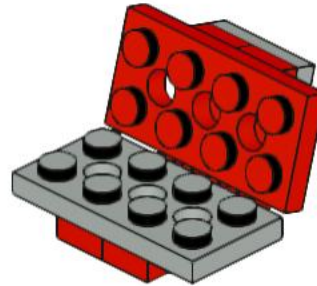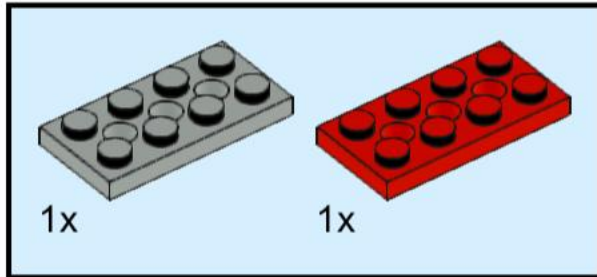


7

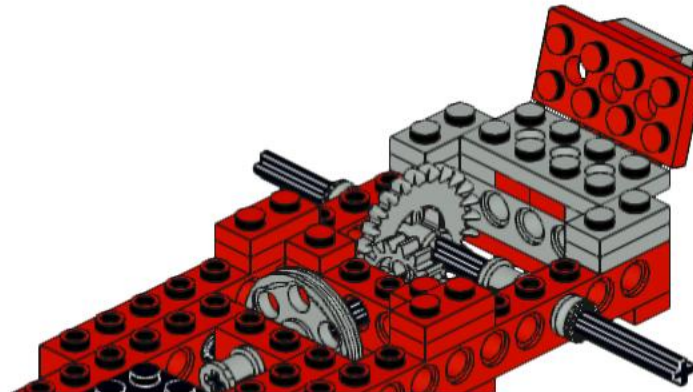



1x 1x4 Technic brick with axle hole

1x 1x10 Technic beam



2x 1x10 Technic beam

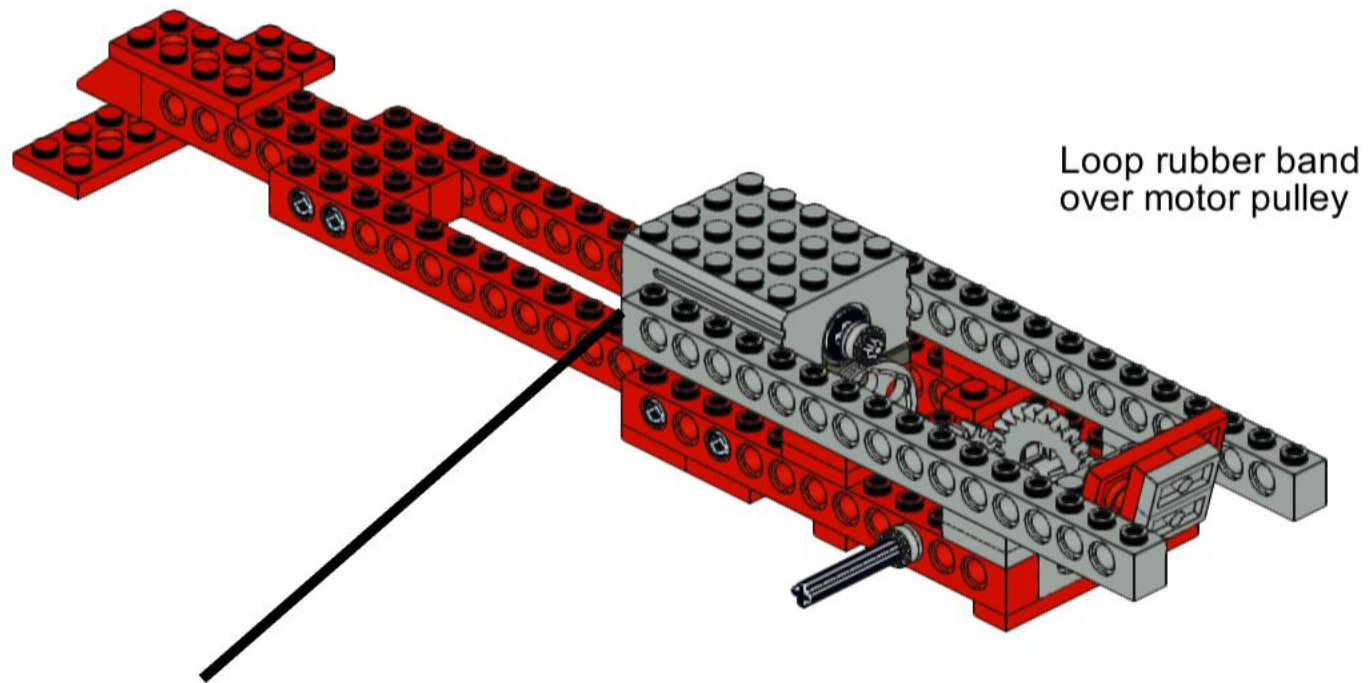



9

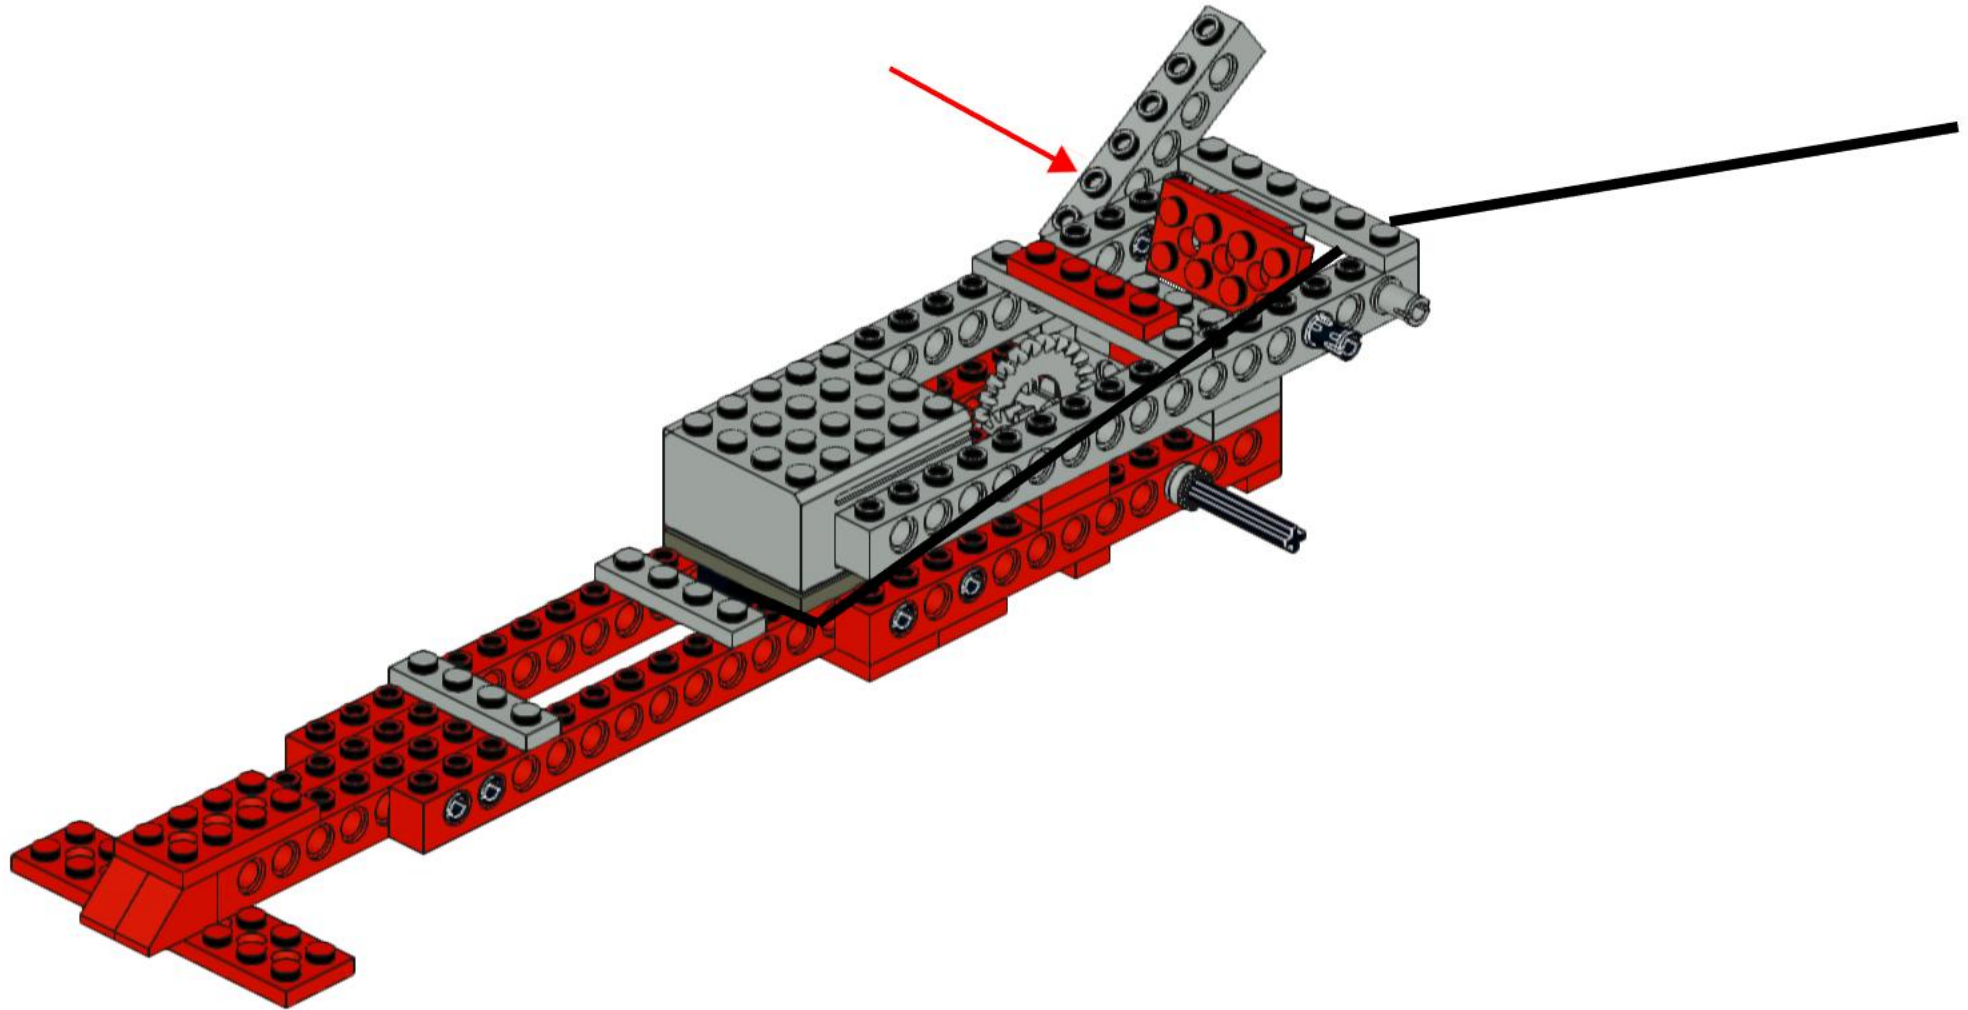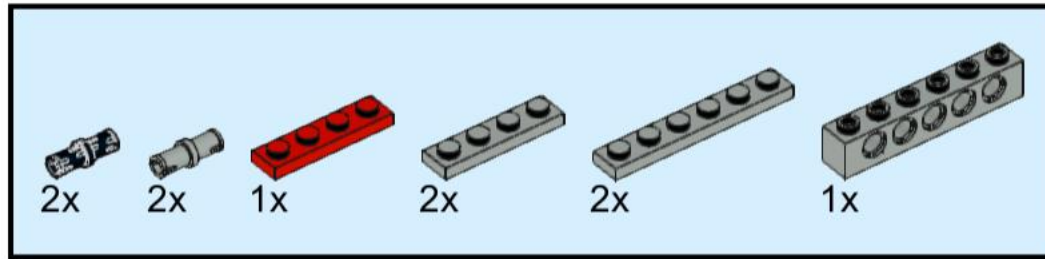



10

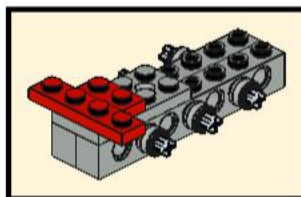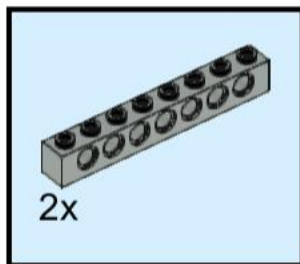


12

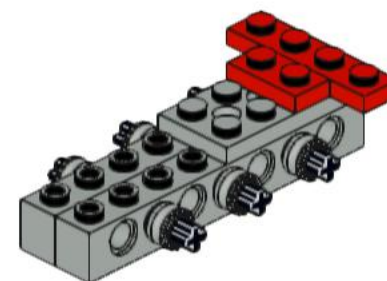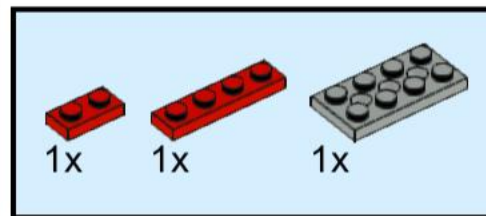




11

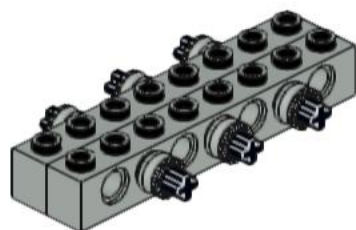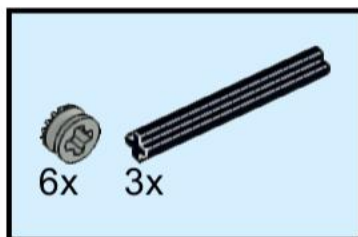



13

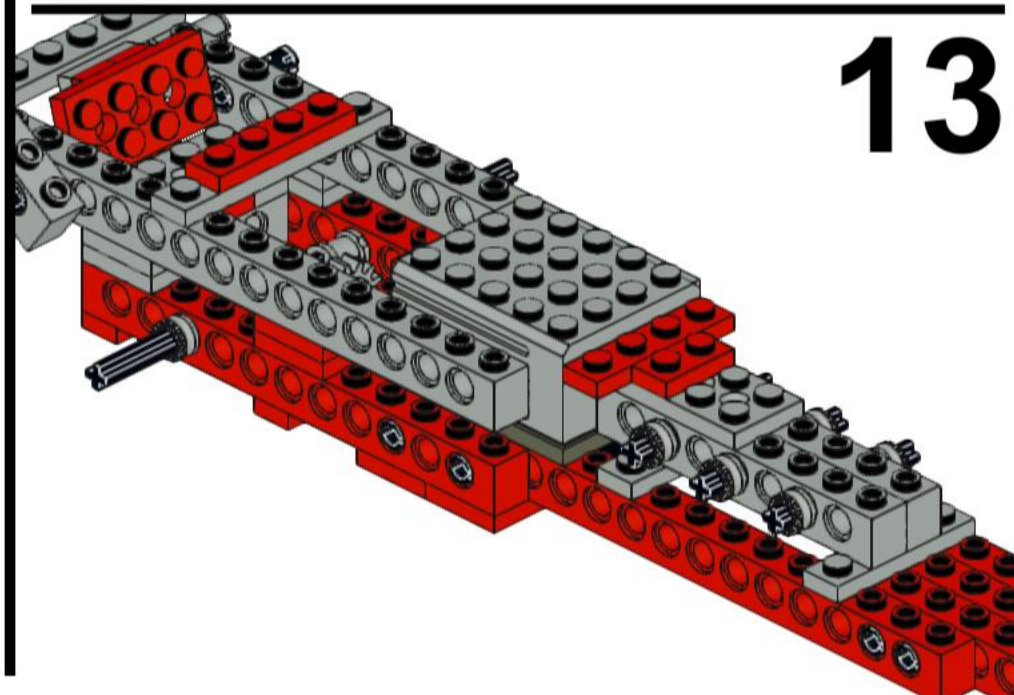


14

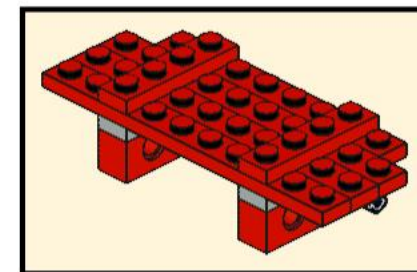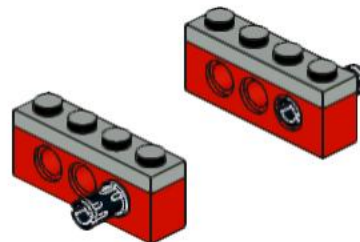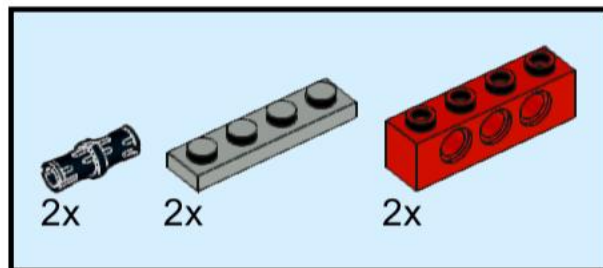



15

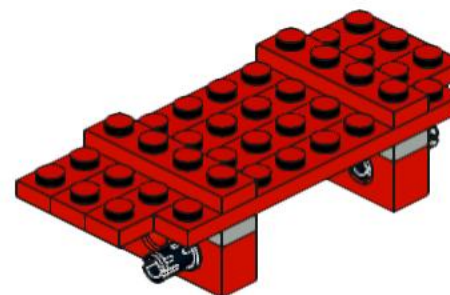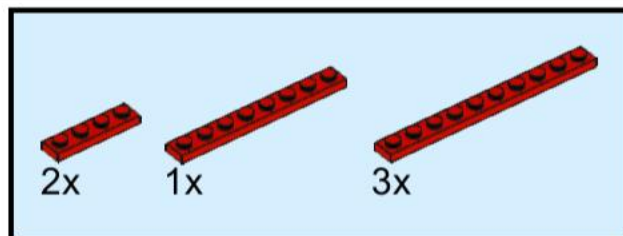



16

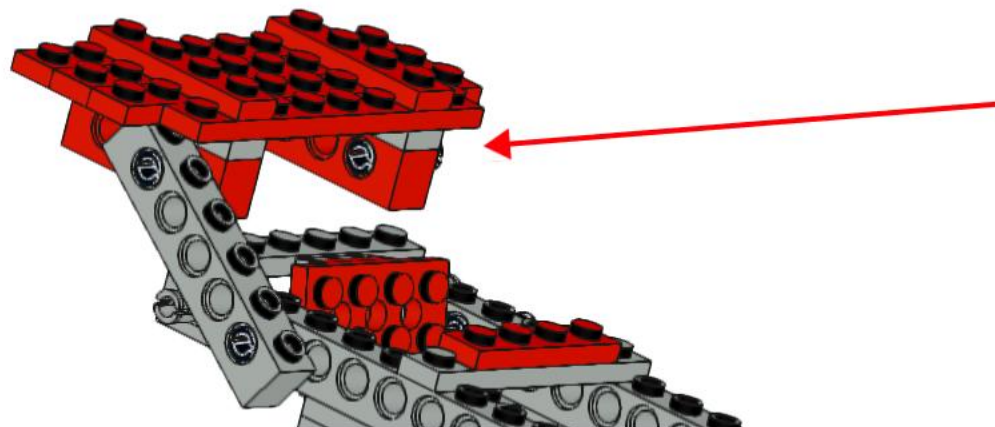



17

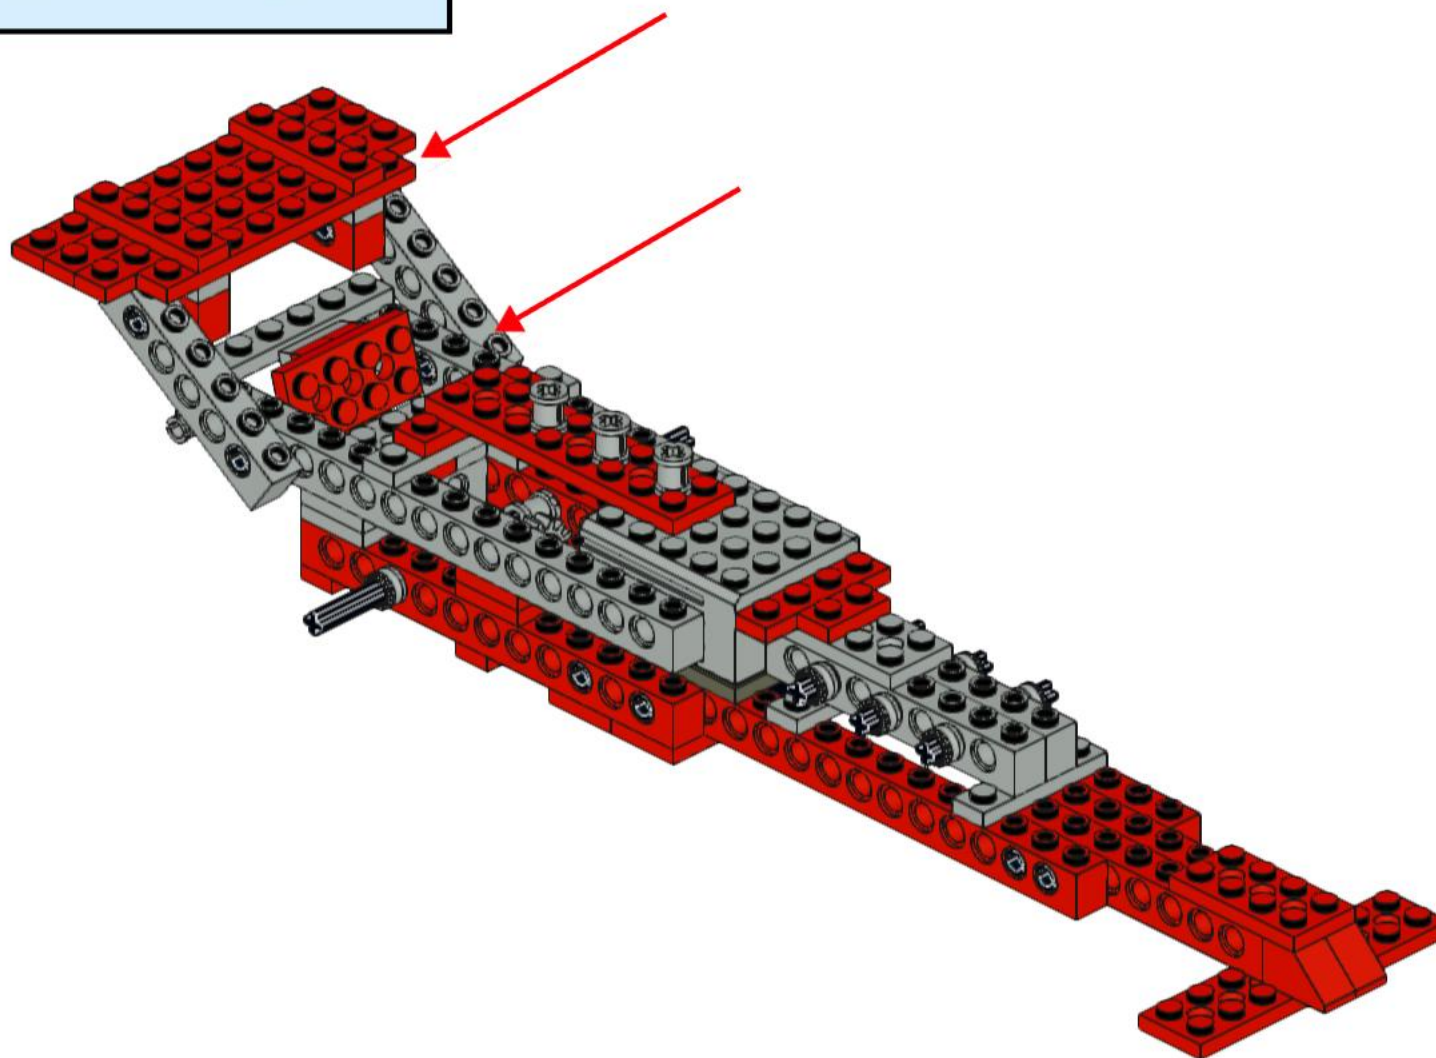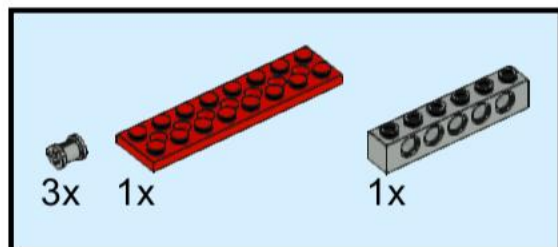


18

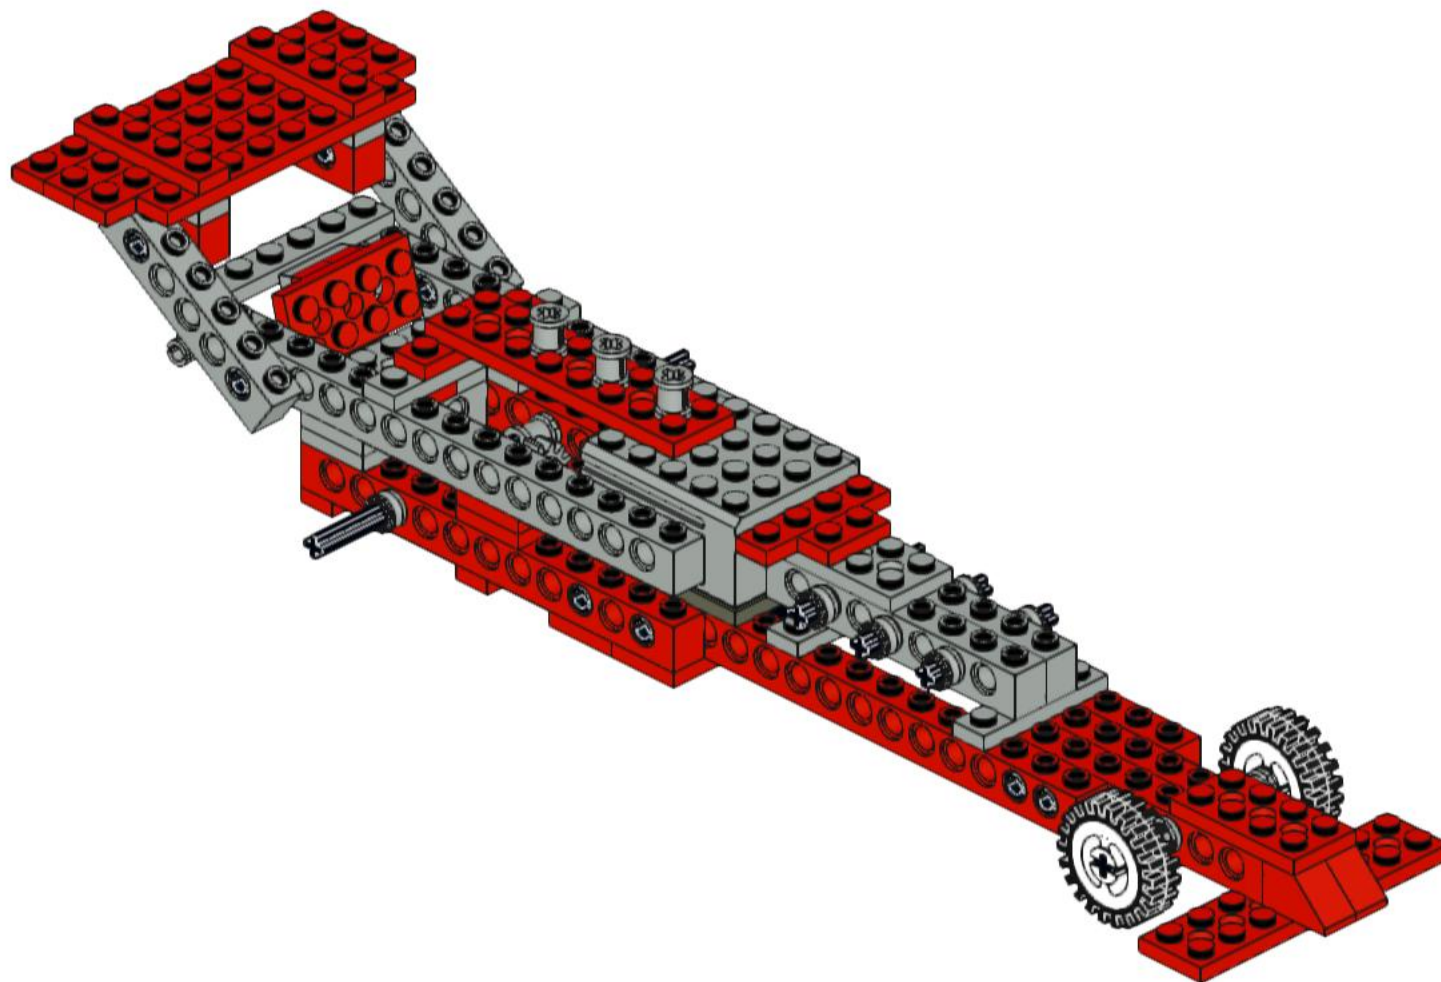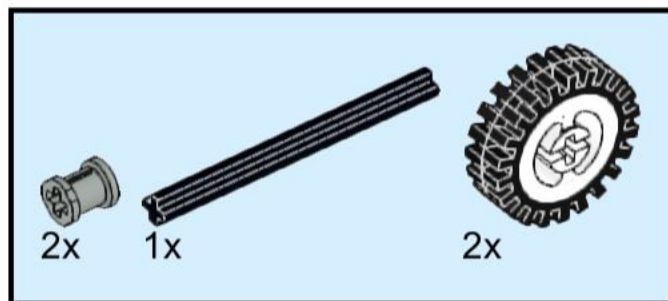



19

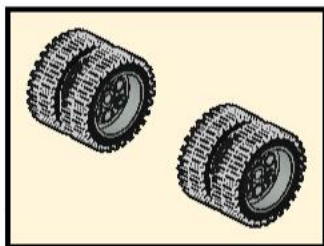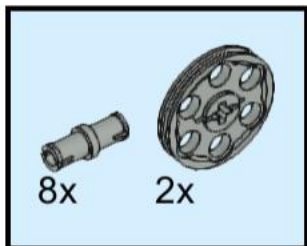


x2

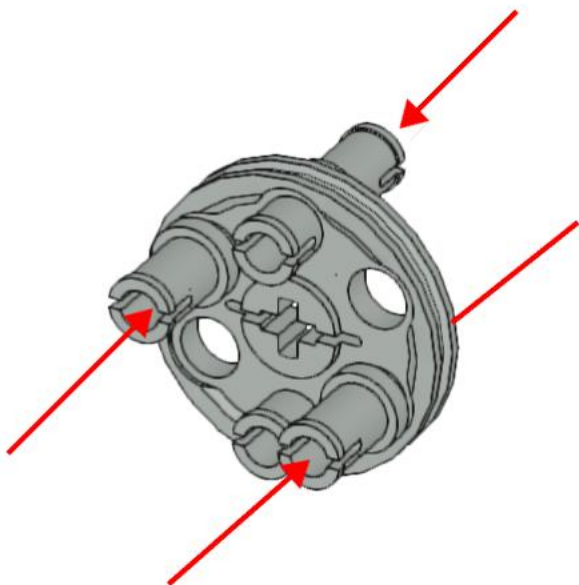

20

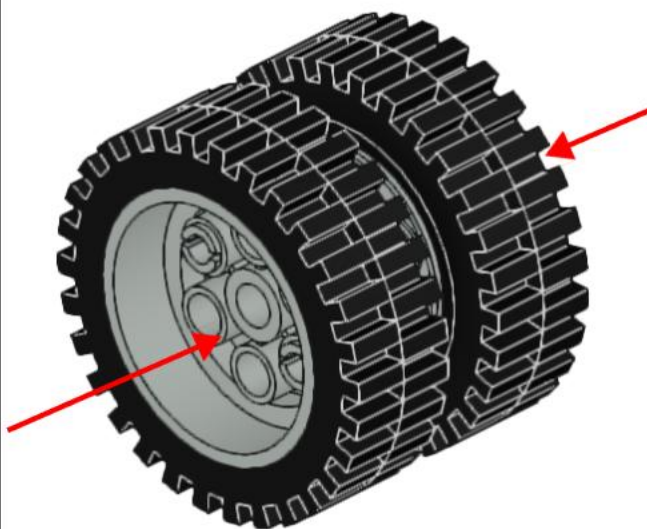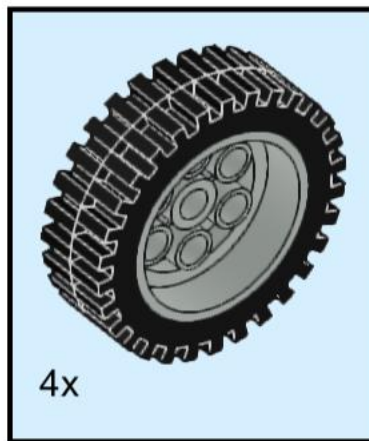

21

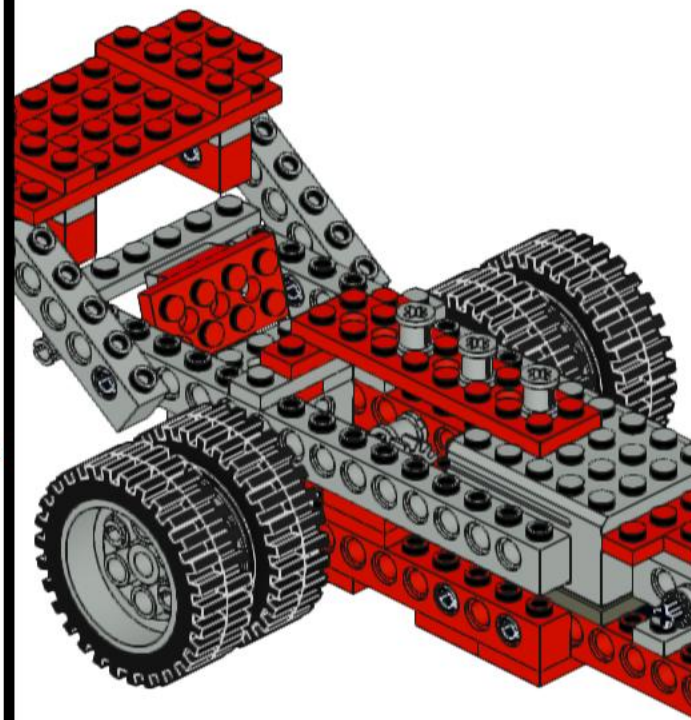

22

